

Basic Manual



A5523T

by TOSHIBA

Contents/
Getting Ready

Making and
Answering Calls

Character Input

Phone Book

Pair Function

Mail

Hello
Messenger

Camera

EZweb

EZ Navi

EZ•FM

Limit Mode

Simple Mode

Others

Remote Auto Lock/
Troubleshooting

Index

au by KDDI

Introduction

Thank you for purchasing the A5523T. Before using your A5523T, be sure to read the A5523T Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Printed Manuals for the A5523T (Japanese)

The A5523T comes with the Basic Manual and Instruction Manual.

- **For learning the basics:**

Read the A5523T Basic Manual (this manual).

- **For learning details on using each function:**


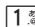
Read the supplied A5523T Instruction Manual.

The following manual is also available on the au homepage.

- Keyword searchable au Online Manual

(<http://www.au.kddi.com/manual/index.html>)

You can also access the au Online Manual from EZweb.

<EZweb Access>  ⇒ EZweb ⇒  Top Menu

⇒ auお客さまサポート (au Customer Support)

⇒ 調べる (Search)

⇒ オンラインマニュアル (Online Manual)

Note

- The typeface and shape/color of fonts used for characters in the sample screens in this manual may differ from those used for characters in actual screens, or some characters may be omitted.


Cell Phone Etiquette

Etiquette for Cell Phone Use

- The cell phone always emits weak radio waves when power is on.
- Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

● The use of cell phones is not allowed in some places.

- Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
- Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.

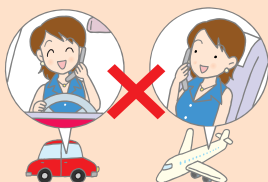

● Radio waves from cell phones may interfere with medical electrical equipment.

- Some people close to you in busy places such as crowded trains may be using a pacemaker. Turn the cell phone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.



● Be considerate of where you use the cell phone and how loudly you talk.

- Do not make calls from cinemas, theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mail.



- Do not use the cell phone in places where you will be in the way of others.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies.
- Take care to avoid talking in a loud voice.



- Obtain the permission of other people before you take their photos with the cell phone's camera.



- Do not use the cell phone's camera for recording information in bookstores and other locations where taking photos is not permitted.

Cell Phone Basics

Cell Phone Features

Hello Messenger

Up to four members can exchange text, photos and sound in real time using au cell phones that support Hello Messenger.



Page
64

Mail

You can e-mail to other cell phones or to a PC.

Page
53

Camera

You can take photos and movie clips and then send them easily by e-mail.



Page
69

EZ•FM

You can listen to the FM radio.

Page
86

Simple Mode

You can make operation even simpler by restricting use to only frequently used functions.



Page
97

EZ Navi

Provides useful positional information services including EZ Navi Walk and Safety Navi.

Page
82

Limit Mode

You can limit incoming and outgoing calls and c-mail.

Page
90

EZweb

You can download Chaku-Uta® and access sites.



Page
75




Manner Mode and Voice Memo

Manner Mode

You can use manner mode to turn off the incoming call ring tone and other tones so as not to inconvenience other people.



When the standby screen is displayed, hold down  for at least one second.


Page

33

Voice Memo

When you cannot answer calls, the cell phone can play an answering message (Japanese) and record memos.

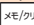

When the standby screen is displayed, hold down  for at least one second.

Page


34

Checking the Power, Signal Strength, and Battery Level

Normally, you should leave the cell phone turned on




To make and receive calls, you need to turn on power.

Hold down  for at least one second.


Page

16

If a signal is not being received, you cannot talk on the cell phone

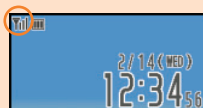


Even in service areas, there are some places where it is difficult to receive a signal.

 indicates the signal strength.


Page

16

Pay attention to the battery level

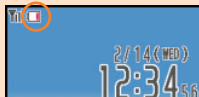

When the battery level is low, the cell phone may not function properly.

 indicates the battery level.

Page

16

Do not use the cell phone while driving!

Holding a cell phone, talking on a cell phone, looking at a cell phone display to send mail or perform some other operation while driving is against the law in Japan.

(Revised Traffic Control Law, effective November 1, 2004)



× Looking at mail on a cell phone display.








× Holding a cell phone in your hand for talking.

Turn off your cell phone or put it in Drive Mode while driving.

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, telling the caller to leave a message on the voice memo.

When the standby screen is displayed, press , use  to select  Drive Mode, and then press  (Select).

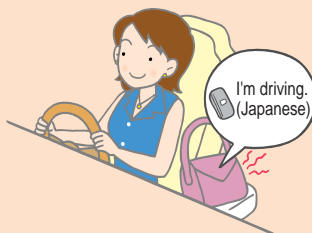

Spam and One-ring Calls

If you receive spam:

You can set the mail filters to reject only specific mail or mail indicated by 未承諾広告※ (Unsolicited Advertisement), which often tends to be spam.

The following mail filters are available for rejecting spam:

- ・ 未承諾広告フィルター
(Unsolicited Advertisement Filter)
- ・ アドレスフィルター (Address Filters)
 - 指定拒否設定
(for not receiving specific mail)
 - 指定受信設定
(for receiving specific mail only)



Page


60

If you receive a call from an unknown phone number:

It may be an attempt to get you to return a call to a service with very high charges.



Incom History			
01	1sec	2/16 16:18	030002XXXX
02	7sec	2/16 15:32	0800001XXXX
03	5sec	2/16 15:10	Tom Daniels
04	7sec	2/16 15:02	Tom Daniels
05	6sec	2/16 14:49	0900003XXXX

 in the Incoming History indicates that there was a call which rang three seconds long or shorter.

Page

32

About Disaster Message Board

When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be referred from anywhere in Japan through EZweb or Internet.

Registering the safety information

- When a big scale disaster occurs, from au phone, you can register your safety information such as your condition or comments to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After the registration of your safety information, you can notify by e-mail your family or acquaintances you have previously designated that you registered your safety information on the 災害用伝言板 (Disaster Message Board).

Referring the safety information


- You can refer to the safety information of the person whom you want to know the information of by entering the phone number of the person from EZweb or Internet.*
* When you refer to the safety information from other carriers' cell phone, PHS or PC, you can refer to it from "<http://dengon.ezweb.ne.jp/>".

Access

 ⇒ EZ Menu (EZweb Menu) ⇒  Top Menu
⇒ 災害用伝言板 (Disaster Message Board)


<http://dengon.ezweb.ne.jp/>

Top display of
the Disaster
Message Board

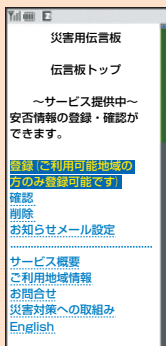


登録 for registration

Safety information
registration display

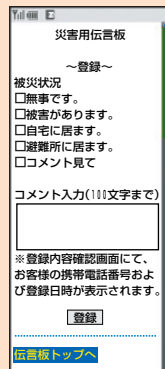


Safety information
reference display

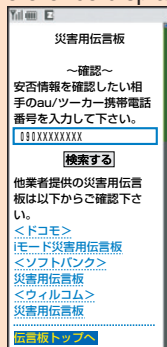

確認 for
reference

- The maximum preservation period of the registered information is 72 hours.
- The maximum available number of each registration is 10. When the number of registration exceeds 10, old information will be overwritten in order of registration.
- The demonstration of this service can be referred to anytime by pressing **[E]** ⇒ **EZ Menu (EZweb Menu)** ⇒ **[1]** **Top Menu** ⇒ **auお客さまサポート** (au Customer Support) ⇒ **災害用伝言板(デモ版)** (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select **English** on the top display of the Disaster Message Board.

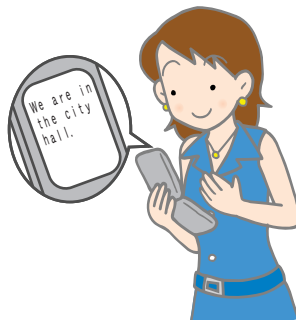

Contents

● Introduction	
● Cell Phone Etiquette	1
Etiquette for Cell Phone Use	1
● Cell Phone Basics	2
Cell Phone Features	2
Manner Mode and Voice Memo	3
Checking the Power, Signal Strength, and Battery Level	3
Do not use the cell phone while driving!	4
Spam and One-ring Calls	5
Disaster Message Board Service	6
● Contents	8
● Getting Ready	10
Checking the Contents of the Box	10
Names of Parts	11
Security Code and Passwords	12
Charging the Battery Pack	13
Learning the Basics	14
Turning On Power	16
Configuring Initial Settings	17
Switching the Display Language to English	18
Viewing the Display	20
Using Menus	22
Initializing E-mail and EZweb	25
Checking Your Phone Number and E-mail Address	25
Changing Your E-mail Address	26
Using Extra Large Characters	28
● Making and Answering Calls	29
Making a Call	29
Making an International Call	29
Answering a Call	30
Redialing (Outgoing History/Incoming History)	31
One-ring Calls	32
Turning On Manner Mode	33
Turning On Voice Memo	34
Playing a Voice Memo	35
Changing the Incoming Ring Tone	36
Adjusting the Incoming Ring Tone Volume	38
Adjusting the Earpiece Volume during a Call	39
● Character Input	40
Character Entry Modes	40
Entering Single-byte Alphanumeric Characters	40
Entering E-mail Addresses	42
Entering Pictograms	44
● Phone Book	45
Saving a Phone Book Entry	45
Dialing from the Phone Book	47
Editing Phone Book Entries	48
Saving a Phone Number from the Incoming or Outgoing History	49
● Pair Function	50
Registering a Pair Partner	50
Making a Call to a Pair Partner	51
Sending a Mail to a Pair Partner	52
Inviting Members to a Hello Messenger Meeting from the Pair Partner Function	52

●Mail	53
Using E-mail	53
Creating and Sending E-mail Messages	54
Reading Received E-mail Messages	56
Reading an E-mail Message with an Attached Photo or Movie	58
Replying to Received E-mail Messages	59
Rejecting Spam	60
Using C-mail	61
Creating and Sending C-mail Messages	62
Reading Received C-mail Messages	63
●Hello Messenger	64
Displaying Hello Messenger	65
Holding a Meeting	66
Inviting Members to a Meeting	67
Accepting an Invitation to Join a Meeting	68
●Camera	69
Camera Image Features	69
Photo and Movie Shooting Tips	70
About Photo and Movie Modes	70
Taking a Photo	71
Recording a Movie	72
Attaching Photos or Movies to E-mail Messages	73
Viewing Photos or Movies	74
●EZweb	75
Accessing Sites	76
Bookmarking Frequently Accessed Pages	78
Viewing Bookmarked Pages	79
Checking Charges	79
Downloading Chaku-Uta®	80
●EZ Navi	82
EZ Navi Features	82
What You Can Do with Safety Navi	84
●EZ•FM	86
Antenna	86
Listening to EZ•FM	87
Switching to Background Music Reception or Exiting EZ•FM	89
●Limit Mode	90
Registering Permitted Members	90
Limiting Calls and C-mail	92
Setting Use Limits	94
Turning Limit Mode On and Off	96
●Simple Mode	97
Entering Simple Mode	97
Exiting Simple Mode	98
Viewing the Display in Simple Mode	99
Viewing the Simple Menu	100
Saving a Phone Book Entry Using Simple Mode	102
Creating and Sending E-mail/C-mail Messages in Simple Mode	104
Taking Photos in Simple Mode	106
Viewing Photos in Simple Mode	107
●Other Functions	108
Using the Safety Buzzer	108
●In Case You Lose Your A5523T	110
Setting Conditions for Enabling the Remote Auto Lock	110
Remotely Enabling the Auto Lock on Your A5523T	111
●Troubleshooting	112
●Index	114




Getting Ready

Checking the Contents of the Box


The box contains the cell phone and accessories.



- Cell phone
- Battery pack
(Installed in the phone)
- Desktop holder

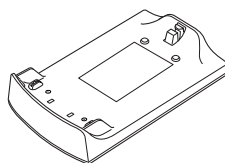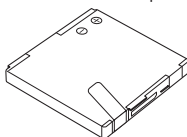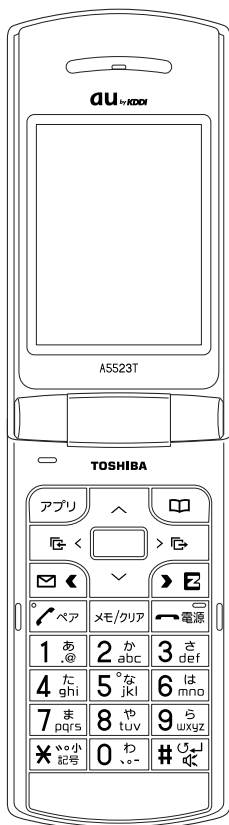

- Toshiba flat-type stereo earphone 04

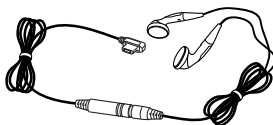

- Basic Manual (Japanese)
- Instruction Manual (Japanese)




- Warranty (Japanese)
- Safety Precautions (Japanese)

Note


- An AC adapter and microSD™ memory card are not included. Purchase a common AC adapter 01 and a commercially available microSD™ memory card separately.

Names of Parts




From the Front

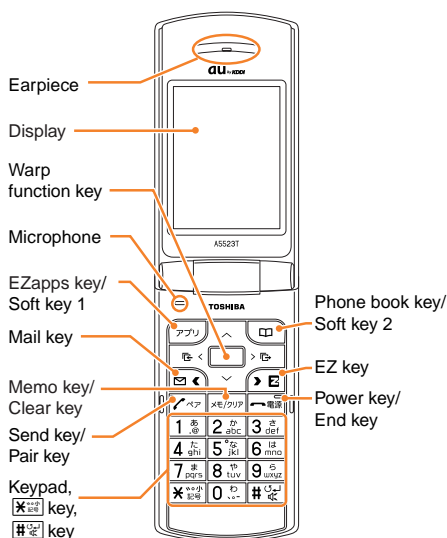

From the Back

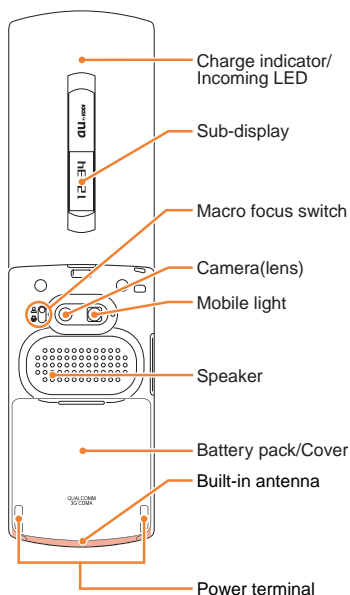

From the Side

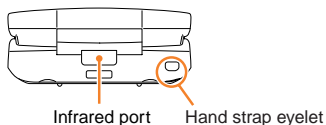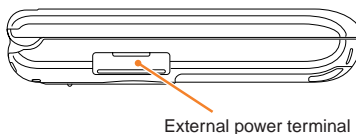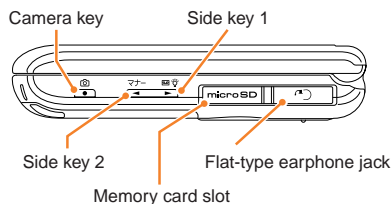

Security Code and Passwords

You can use the security code and passwords described below to restrict use of your A5523T.

Take care not to forget the security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Examples	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a regular phone. ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb. ③Changing various settings from <i>Mail Filter</i> or <i>Other Setup</i> of E-mail Setup.
Initial Setting	The four-digit number you wrote on your subscription form.

Lock No.

Usage Examples	Changing various settings of the cell phone, etc.
Initial Setting	1234 (four digits)

Limit Mode Password

Usage Examples	①Setting/canceling Limit Mode. ②Changing the Limit Mode settings.
Initial Setting	12345678 (eight digits)

EZ Password

Usage Examples	Concluding/canceling subscriptions for EZweb fee-based content.
Initial Setting	The four-digit number you wrote on your subscription form.

Premium EZ Password

Usage Examples	①Concluding/canceling subscriptions for EZweb fee-based content paid by using まとめてau 支払い (au Collective Payment Service). ②Purchasing products from EZweb sites that use まとめてau 支払い (au Collective Payment Service).
Initial Setting	The four-digit number you wrote on your subscription form.

Navi Password

Usage Examples	Permission to request Auto Position Search registration from an au cell phone or launch Safety Navi.
Initial Setting	Set when Safety Navi is first launched (four digits).


Charging the Battery Pack

The battery pack is not fully charged at the time of purchase.

Be sure to charge the battery pack before using the cell phone for the first time.



- An AC adapter is not included. Purchase a common AC adapter 01 separately.

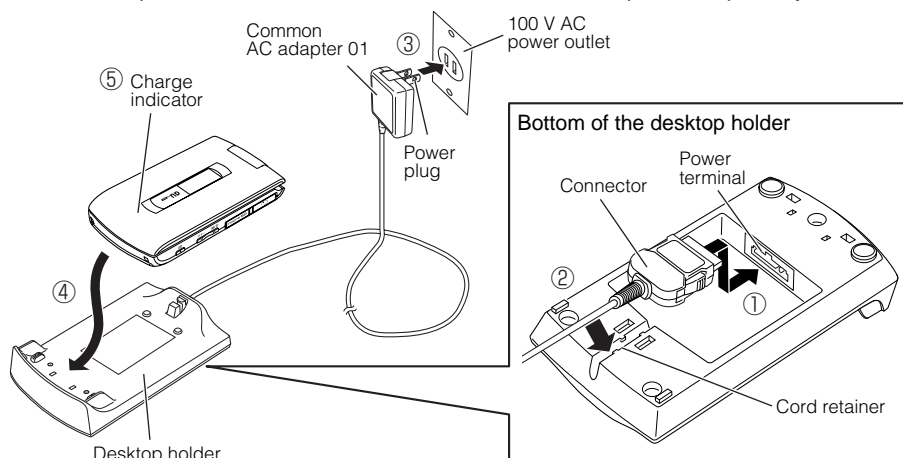

1 Connect the common AC adapter 01 to the desktop holder.

- Check the shape of the connector for the common AC adapter 01 and then plug it into the power terminal on the bottom of the desktop holder.

2 Fit the common AC adapter 01 cord into the cord retainer.

3 Turn the common AC adapter 01's power plug 90 degrees and connect it to a 100 V AC power outlet.

4 While the A5523T is closed with the battery pack attached, insert it into the desktop holder as shown in the figure.

5 Confirm that the charge indicator lights.

- Charging: The charge indicator lights.
- Charging finished: The charge indicator goes out.



If you charge the A5523T battery pack while the phone is turned on, it beeps when charging starts or ends.

Note

- Hold the desktop holder while removing the A5523T.
- You can also charge the battery pack by connecting the common AC adapter 01 directly to the A5523T.

Learning the Basics

Key Assignments

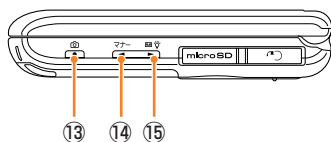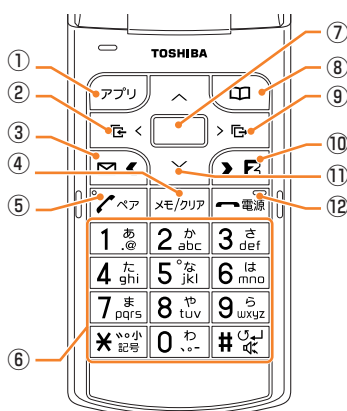

- ① アプリ : EZapps startup
- ② 受信履歴 : Display Incoming History
- ③ メール : E-mail
- ④ メモ/クリア : Voice memo setting/cancel;
character delete; operation cancel
- ⑤ 通話 : Make and answer calls; use the Pair function
- ⑥ 0 ~ 9, *, # : Phone number and character input
- ⑦ ホーム : Display Launcher menu
- ⑧ 電話帳 : Phone Book
- ⑨ 発信履歴 : Display Outgoing History
- ⑩ EZメニュー : Display EZ menu
- ⑪ デスクトップ : Display Desktop menu
- ⑫ 電源 : Power on/off; end call/communication;
cancel operation
- ⑬ カメラ : Camera
- ⑭ マナー : Manner mode
- ⑮ モバイルライト : Mobile light on/off




Note

- To lock the side keys to prevent unintentional side key (カメラ, マナー, and モバイルライト) operations while your phone is closed, hold down 電源 for at least one second when the standby screen is displayed. To unlock the side keys, hold down 電源 for at least one second.
 - If you press 通話 for at least one second when 緊急通報 (Emergency Call) is displayed on the standby screen, your cell phone searches for a base station with a good signal.
 - You can sound the Safety Buzzer by holding down # for at least one second when the standby screen is displayed.
- See page 108 for information on the Safety Buzzer setting.

Warp Function Key


Use the up, down, left, and right parts of the key to select items and to move the cursor. Press the center of the key to confirm a selected item.

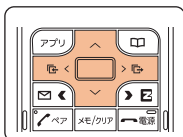

	Selects items, and moves the cursor up, down, left and right.
	Confirms the selected item or starts the selected operation.

Soft Keys


When indications such as the following are displayed at the bottom of the display, you can press the corresponding soft keys to perform the indicated operations. The soft key indications vary depending on the screen.

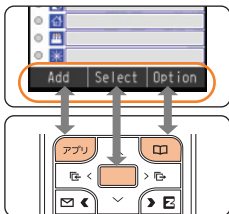

Soft key 1 	Performs the operation indicated at the bottom left of the screen.
Center key 	Performs the operation indicated at the bottom center of the screen.
Soft key 2 	Performs the operation indicated at the bottom right of the screen.

If you lose track of where you are or if you make a mistake...

Perform one of the following operations when you lose track of where you are or if you make a mistake while operating the cell phone.

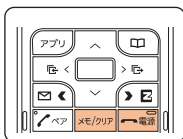

	Returns to the previous screen.
	Returns to the standby screen.






Turning On Power

- 1 Hold down  for at least one second.



Standby screen

Check the signal strength.

				
Strong	Medium	Weak	Very weak	Out of range

- You cannot receive or make calls if  is displayed.

Check the battery level.

				
Full	Low	Very low (requires charging)	Empty	Charging



Turning Off Power

Hold down  for at least one second.




Configuring Initial Settings

- 1** When the standby screen is displayed, press .



Initial menu

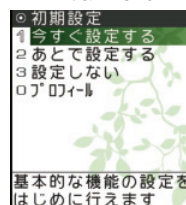

- 2** Press  **設定しない (Do Not Setup).**

- If you select **設定しない (Do Not Setup)**, the initial settings are as shown below.



Lock No.	1234	EZweb	Medium-small
Telephone	Medium	Character Input	Medium
E-mail	Medium-small	Notify Call ID	ON
C-mail	Medium-small	Incoming Call	Pattern 1

Note

- Even if you do not configure the initial settings, you can still make and answer calls.
- The initial settings include changing the Lock No., setting the character size, setting the Notify Call ID, and setting the call ring tone.
- You need to configure initial settings before using the cell phone for the first time only. Furthermore, you can also change each of the initial settings later.
- After configuring initial settings, you can switch the display language to English (see page 18).

For Simple Mode Users



For details on Simple Mode (mode to make operation even simpler by restricting use to only frequently used functions), see "Simple Mode" on page 97.



Switching the Display Language to English

You can switch the display language for function names and other items to English.


- 1** When the standby screen is displayed, press .




- 2** Use  to select **機能 (Function)** and then press  (**選択 [Select]**).

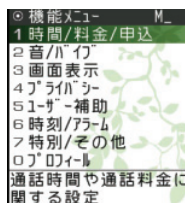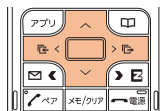

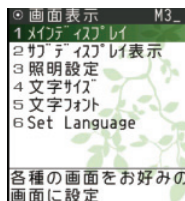



- 3** Press  **画面表示 (Screen Setup)**.



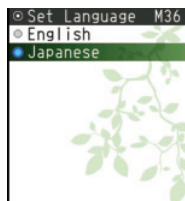


- 4** Press  **Set Language**.

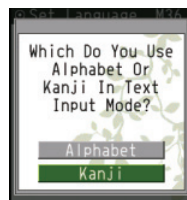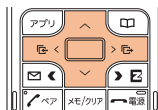

- 5** Use  to select *English* and then press  (**Select**).



- 6** Use  to select *Alphabet* and then press  (**Select**).

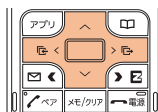


Viewing the Display

Display indicators keep you informed when new e-mail arrives, about the status of function settings, etc.


Display



Indicator	Description
①	Indicates signal strength.
②	Indicates battery level.
③	Indicates that EZweb is in use.
④	Indicates a call is in progress.
⑤	Indicates that EZapps is in use.
⑥	Indicates that Hello Messenger is in use.
⑦	Indicates the current date and time.
⑧	Indicates an unanswered call.
⑨	Indicates received or unread e-mail/c-mail.
⑩	Indicates that EZ·FM is in use.
⑪	Indicates that the manner mode is turned on.
⑫	Indicates that the voice memo or manner mode is turned on.
⑬	Indicates the side keys are locked.
⑭	Indicates a microSD™ memory card (commercially available) is inserted.
⑮	— User menu
⑯	— Desktop menu

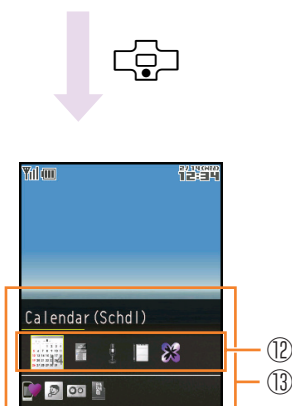

Sub-display

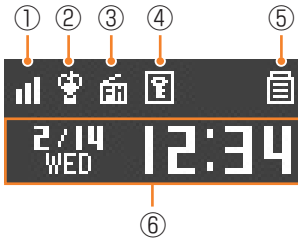

Indicator	Description
①	Indicates signal strength.
②	Indicates that the manner mode is turned on.
③	Indicates that EZ·FM is in use.
④	Indicates the voice recorder is recording.
⑤	Indicates the side keys are locked.
⑥	Indicates battery level.
⑦	Indicates the current date and time.




Note

- The date and time are set automatically.
- The layout and content of screens in this manual are only for the purpose of explanation and contain some indicators that cannot appear at the same time.
- The standby screens shown in this manual have the default *Hamabe* wallpaper setting specified.

Using Menus

Launcher Menu


The Launcher menu provides you with access to various A5523T functions. The Launcher menu contains the following items.

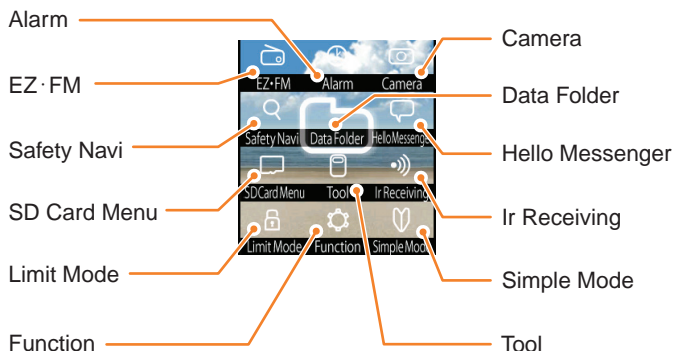



- When the standby screen is displayed, press .



Launcher menu

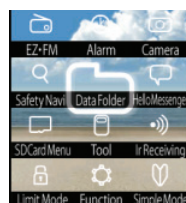


- Use  to select an item.

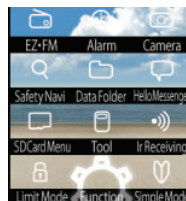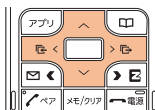

- Press  (Select).

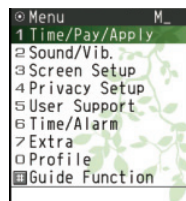


→The item selected in the Launcher menu appears.




Using EZ Menu

The EZ menu provides a quick and easy way to access the EZweb functions.

When the standby screen is displayed, press  to display the EZ menu.

Use  to select a menu, use  to select an item and then press  (Select) to access a function.

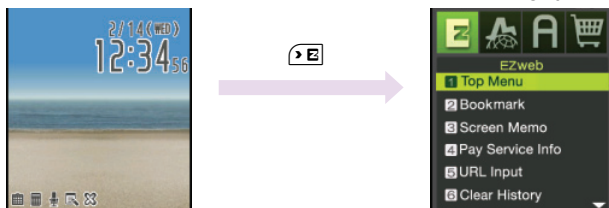

You can access the following functions from the EZ menu.



EZweb

Top Menu
Bookmark
Screen Memo
Pay Service Info
URL Input
Clear History
EZ Setup
Last Screen



EZnavi

EZnaviwalk
Safety Navi
EZnavi Setup



EZapps


EZ Game Street!
To Search EZapps!
EZapps Menu




Shopping&Auctions

Jump To Shopping&Auctions
Jump To au Shopping Mall
Jump To au Auctions
Jump To au Records
Jump To au Books
Jump To au Games



Option Menus

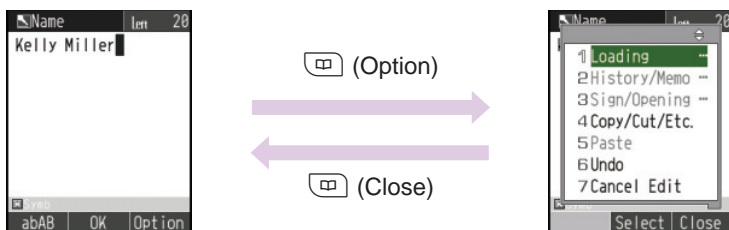An Option menu for performing various related operations will open if you press  when **Option** is displayed in a screen for configuring function settings, entering characters, or performing other operations.



About Displaying Alert Window


Alerts are displayed in situations such as when you receive mail or you were unable to take a call.

If the alert window is displayed on the standby screen, you can temporarily hide the alert window and display the Launcher menu by pressing  and then .

To redisplay the temporarily hidden alert window, press

 again when the standby screen is displayed.

Alert window

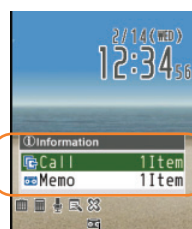


Initializing E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.


Also, before use, be sure to configure initial settings. Your e-mail address is assigned automatically when you initialize e-mail and EZweb.

- 1 When the standby screen is displayed, press .

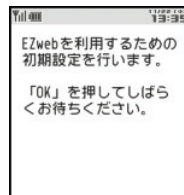

- 2 Press .

→After a short while, the screen shown to the right will appear. This indicates that the setup is complete.

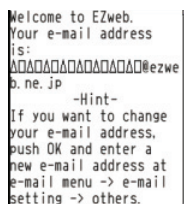
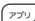


- 3 Press .



→The initial settings are complete.



Note

- You can also configure initial settings by pressing  or .


Checking Your Phone Number and E-mail Address

- 1 When the standby screen is displayed, press  and then press .




Changing Your E-mail Address

You can change the account name part of the e-mail address as indicated to the right.

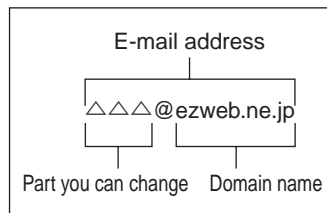


- 1** When the standby screen is displayed, press and then press **E-mail Setup**.


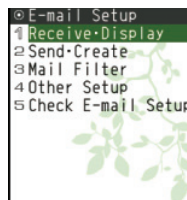


- 2** Press **Other Setup**.



→The cell phone connects to the server.

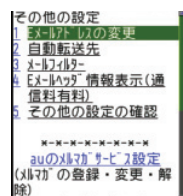

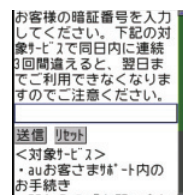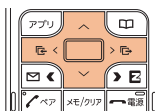

- 3** Use to select **Eメールアドレスの変更** (Change E-mail Address) and then press (Select).




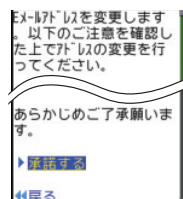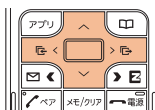


- 4** Enter your security code, press (OK), use to select **送信** (Send), and then press (Select).





- Your security code is the four-digit number you wrote on your subscription form.
- Any time the wrong security code is entered three times during a single day, the e-mail address change operation will be disabled until the following day.

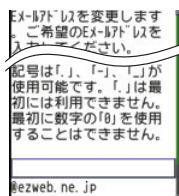

- 5** Use  to select **承諾する** (Accept) and then press  (Select).





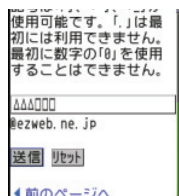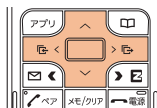

- 6** Use  to select the entry box, press  (Edit), enter an e-mail address using single-byte alphanumeric characters, and then press  (OK).




- For details on entering e-mail addresses, see page 42.

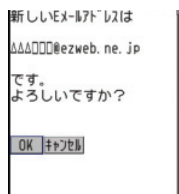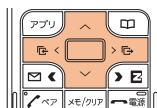- 7** Use  to select **送信** (Send) and then press  (Select).



- 8** Use  to select **OK** and then press  (Select).

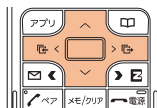

Note


- Your e-mail address will not be changed if the address you enter above is already being used. If this happens, enter a different e-mail address.



Using Extra Large Characters


This feature displays text using oversize (extra large) characters in screens such as the Call screen, phone book list, E-mail and C-mail checking screen and the EZweb screen.

Example: Switching the character size in *Telephone* to *Extra Large*

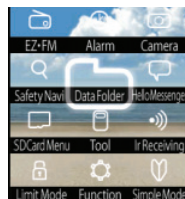
- 1** When the standby screen is displayed, press .




- 2** Use  to select *Function* and then press  (Select).

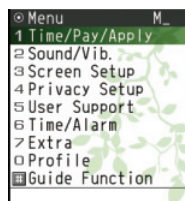

- 3** Press  *Screen Setup*.

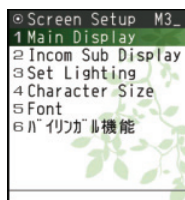

- 4** Press  *Character Size*.

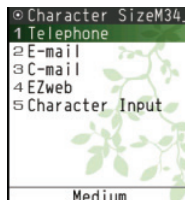

- 5** Press  *Telephone*, use  to select *Extra Large*, and then press  (Select).



- To switch to extra large characters for e-mail, c-mail or EZweb, press  *E-mail*,  *C-mail* or  *EZweb* instead of  *Telephone*.

Making and Answering Calls

29


001 KOKUSAI MOBILE TALK

Application required.

For inquiries, contact the KDDI Customer Service Center.

 0077-7160


(toll-free; open 9:00 to 20:00 on everyday including weekends and national holiday)

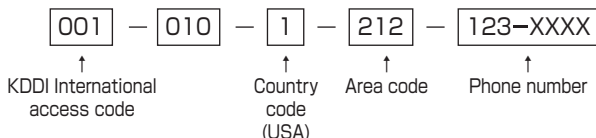

- Charges for 001KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Check the Country code at the au Customer Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or au Customer Center.

Answering a Call

1 To answer a call, press .

- When you have finished the call, press .



Display When a Call is Received

The phone number of the caller appears.



If the caller's phone number and name are in your phone book, the name is also displayed.




When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
ID Unsent Setup	The caller did not send a Caller ID.
Pay Phone	The call is from a pay phone.
Not Support	The call is from a phone that does not support Caller ID.



Missed Call Notification

If you did not answer a call,  and  Call are displayed to let you know that you missed a call.


To check the caller's phone number, use  to select  Call and then press . You can then return the call (see page 31).







Redialing (Outgoing History/Incoming History)


Example: Returning a call to a phone number in the incoming history


1 When the standby screen is displayed, press .

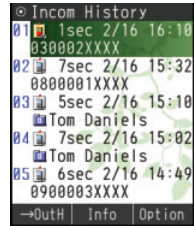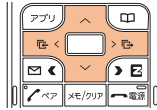- Pressing  while the standby screen is displayed displays the Outgoing History screen.
- The phone numbers are displayed in order of the most recent to the oldest.




2 Use  to select the phone number you want to call and then press  (Info).

- If you press  (→OutH), the Outgoing History screen will be displayed.

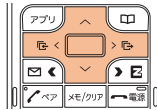

3 Press .

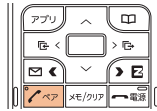

Note


- The cell phone can store up to 50 phone numbers in each of the incoming history and outgoing history in order of the most to least recent.


One-ring Calls

What is a One-ring Call?

A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get the receiver to return the call, which will connect you to a dating service or some other service that charges caller at high rates.


One-ring Indicator

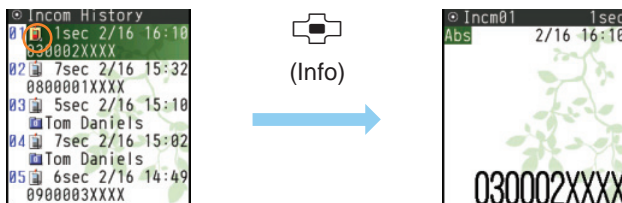


 (one-ring call icon) indicator on the display indicates you have received a one-ring call (a call rang for three seconds or shorter) and the call is marked with **Abs** on the Incoming History screen. Be careful when you return a call to an unknown caller.




Turning On Manner Mode


The cell phone informs you of an incoming call or message by vibrating.




- 1 When the standby screen is displayed, hold down  for at least one second.

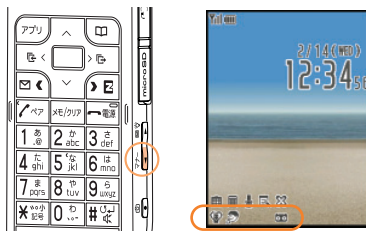
➔ This turns on manner mode, and displays  and  on the standby screen. This also turns on voice memo, which is indicated by  on the standby screen.



Turning Off Manner Mode

When the standby screen is displayed, hold down  for at least one second.


➔ Turning off manner mode causes  and  to disappear from the standby screen. Voice memo is also turned off, which is indicated by  disappearing from the standby screen.

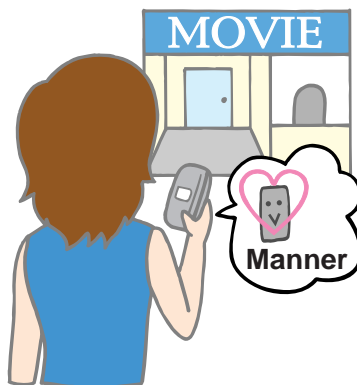


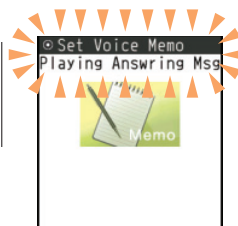
Note

- Even in manner mode, the cell phone will still emit the shutter sound when you take a photo and the start and stop tones for movie recording.


Turning On Voice Memo

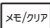- 1 When the standby screen is displayed, hold down  for at least one second.

→ The answering message (Japanese) is played, then voice memo is turned on, which is indicated by  on the standby screen.



Turning Off Voice Memo

When the standby screen is displayed, hold down  for at least one second.

→ Voice memo is turned off and  disappears from the standby screen.




Note

- The cell phone can record a maximum of three messages, each up to thirty seconds long.
- The cell phone can record up to a total of three voice memos including call voice memos. A call voice memo is for recording the voice of the other party during a call.
- Voice memo is a function that automatically answers calls and allows callers to record messages. Use the answering service when your phone is turned off or when you are in a location where a signal cannot be received.


Playing a Voice Memo



If a voice memo is recorded


➔  *Memo* and the number of memos appear on the standby screen.

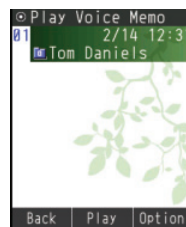

1 Use  to select  *Memo* and then press .




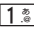


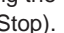

2 Use  to select the voice memo you want to play and then press  (**Play**).

- To stop playing the voice memo, press  (**Stop**).




Deleting a Voice Memo


On the Play Voice Memo list, use  to select the voice memo you want to delete.



- ➔ Press  (Option) and then press  *Delete*.
- ➔ Use  to select *Delete One* and then press  (**Select**).
- ➔ Use  to select *Yes* and then press  (**OK**).


Changing the Incoming Ring Tone


1 When the standby screen is displayed, press .

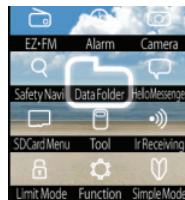



2 Use  to select *Function* and then press  (Select).

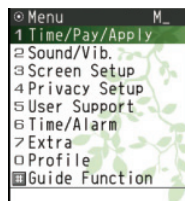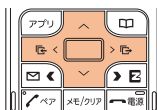

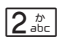
3 Press  *Sound/Vib..*

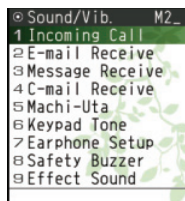

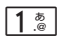


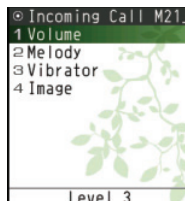
4 Press  *Incoming Call.*



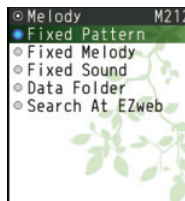



5 Press  *Melody.*

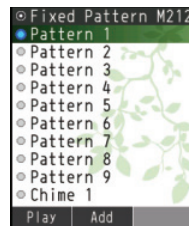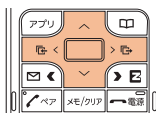

- 6** Use  to select **Fixed Pattern** and then press  (**Select**).



- 7** Use  to select **Pattern 3** and then press  (**Play**).

- If you press  (Back) or  , the tone stops playing and you can select another tone.



- 8** Press  (**OK**).
- ➔The incoming ring tone is set.






Note


- You can select from among fixed patterns, fixed melodies, fixed sounds, data folder contents, and EZweb search for your ring tone.
- The initial default setting is the *Pattern 1* fixed pattern.

Adjusting the Incoming Ring Tone Volume

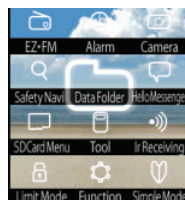
- When the standby screen is displayed, press .





- Use  to select *Function* and then press  (Select).

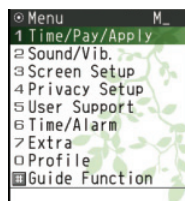


- Press  *Sound/Vib..*

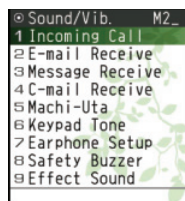

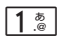
- Press  *Incoming Call.*

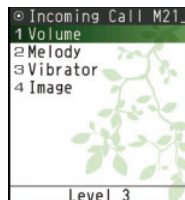



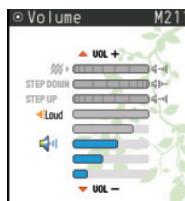



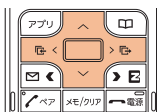

- Press  *Volume.*



6 Use to adjust the volume and then press (OK).





- Each press of  changes the volume one step.



	After a vibration alert, the ring tone sounds while gradually increasing in volume.
STEP DOWN	The ring tone sounds while gradually decreasing in volume.
STEP UP	The ring tone sounds while gradually increasing in volume.
 Loud  ↑  Standard  ↓  Minimum	The ring tone sounds at the set volume.
 (Silent)	The incoming ring tone does not sound.


- Keep on pressing  to set Silent ().

Adjusting the Earpiece Volume during a Call

1 During a call, press .

-  : Increases the volume.
-  : Decreases the volume.

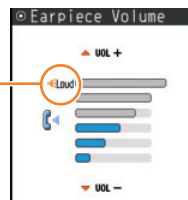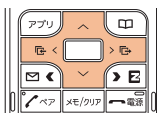

Turning on  (Loud volume) will increase the volume of the earpiece output to make it easier to hear.

2 Press (OK).




Character Input

Character Entry Modes

When a character entry screen is displayed, you can select the character entry mode if you press .


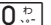
Menu Items


Kanji : Kanji conversion mode
a A : Double-byte alphanumeric mode
abAB : Single-byte alphanumeric mode
1 2 : Double-byte number mode
1234 : Single-byte number mode
Kana : Single-byte kana mode

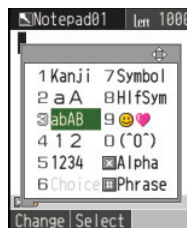





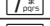
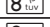

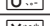
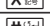
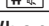



Use  to select a character entry mode and then press  (Select).

Entering Single-byte Alphanumeric Characters

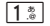You can use the keys  to  to enter characters. More than one character is assigned to each key.

For example, each press of  changes the displayed character to the next character assigned to the key in the order of a ⇒ b ⇒ c ⇒ A ⇒ B ⇒ C ⇒ 2. The following table shows the key assignment for entering characters.


Key	Number of Times to Press the Key											
	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	—	/	:	~	?	,	'	!	1
	a	b	c	A	B	C	2					
	d	e	f	D	E	F	3					
	g	h	i	G	H	I	4					
	j	k	l	J	K	L	5					
	m	n	o	M	N	O	6					
	p	q	r	s	P	Q	R	S	7			
	t	u	v	T	U	V	8					
	w	x	y	z	W	X	Y	Z	9			
	0											
	Single-byte symbols (switches an unconfirmed character between uppercase and lowercase)											
	Adds a line break and displays characters in the opposite order											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).


Note


- Before you enter single-byte alphanumeric characters, switch to the single-byte alphanumeric mode.

Entering Two or More Characters Assigned to the Same Key


After you enter the first character, press  to move the cursor (■) to the right and then enter the next character.


Example: Entering "ab"


Press  once.

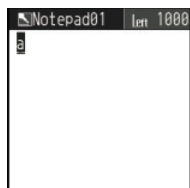




Press  once.

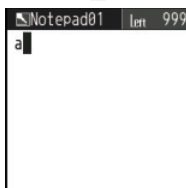

Press  twice.

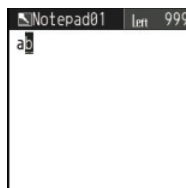

Deleting Characters

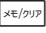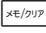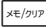To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

Starting a New Line

Press .

Note

- Certain functions such as c-mail do not support entering new lines.

Entering E-mail Addresses

E-mail Address Compatible Characters







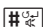

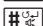
- Before you enter an e-mail address, switch to the single-byte alphanumeric mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

How to Enter E-mail Addresses

Use  to  to enter characters and numbers.

Example: Entering "taro.23@toshiba.co.jp" for the recipient's e-mail address

1 Enter "taro.23".

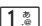- t : Press  once.
 a : Press  once.
 r : Press  three times.
 o : Press  three times.
 . : Press  once.
 2 : Press  and then press  once.
 3 : Press  and then press  once.




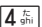

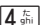





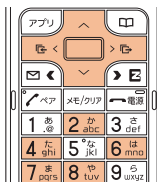
2 Enter "@".

- @: Press  twice.






3 Enter "toshiba" and then press (OK).



- t : Press  once.
 o : Press  three times.
 s : Press  four times.
 h : Press  twice and then press .
 i : Press  three times.
 b : Press  twice and then press .
 a : Press  once.



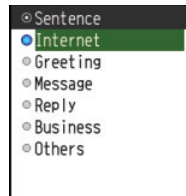



4 Press  (abAB) and then press  *Phrase*.

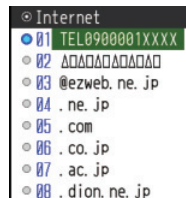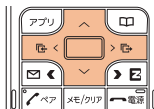

5 Use  to select *Internet* and then press  (Select).



6 Use  to select *.co.jp* and then press  (Select).
⇒ ".co.jp" is entered.

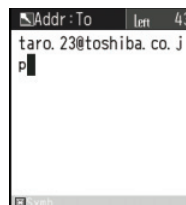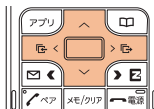

Note


- To enter ".co.jp" etc., you can use the Sentence menu.

Entering Pictograms


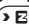
1 When a character entry screen is displayed, press


 (abAB).

- You can also enter symbols, emoticons, and useful sentences (fixed text) from the character entry mode menu.

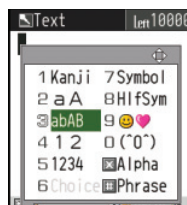



2 Press .

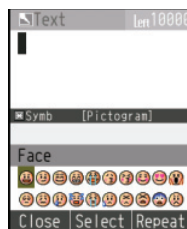
- You can switch the Pictogram screen by category, such as Face, if you press  or .




3 Use to select the pictogram you want to enter and then press (Select).

➔ This enters the pictogram.

- You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).
- Pictograms are not displayed properly on some non-au cell phones, personal computers, and other devices.

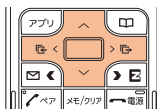



Note

- When a character entry screen is displayed, you can enter pictogram, a symbol, emoticon, or alphanumeric character if you press .

Phone Book


Saving a Phone Book Entry

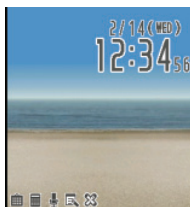




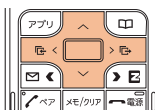
Hold down  for at least one second.



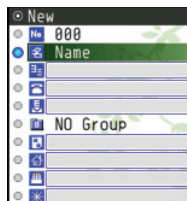

New screen







- Use  to select  (Name) and then press  (Select).




- Enter a name and then press  (OK).

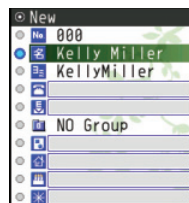- The  (Reading) for the name is entered automatically.
- For details on entering characters, see page 40.




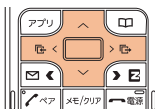

- Use  to select  (Tel. #1) and then press  (Select).





- Enter a phone number and then press  (OK).

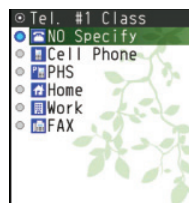


- If the phone number is for a regular phone, enter the phone number starting with the area code.

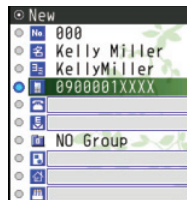
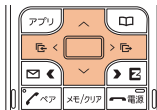


5 Use  to select a phone number class and then press  (Select).




- Follow the next two steps to enter an e-mail address. If you do not want to enter an e-mail address, proceed to Step 9.

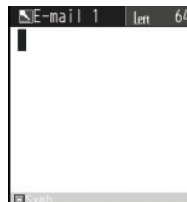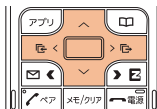

6 Use  to select  (E-mail 1) and then press  (Select).


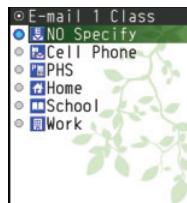


7 Enter the e-mail address and then press  (OK).



- For details on entering e-mail addresses, see page 42.

8 Use  to select an e-mail address class and then press  (Select).

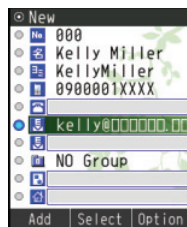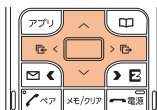


9 Press  (Add).






Note



- The phone book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save five phone numbers and five e-mail addresses for each phone book entry.
- You can also assign a group, and enter address, birthday, and other information.

Dialing from the Phone Book

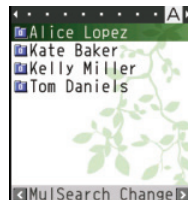
- 1 When the standby screen is displayed, press .





- 2 Use  to select the entry containing the phone number you want to dial and then press  (Select).

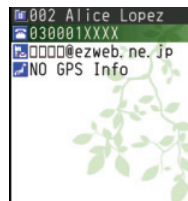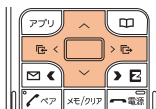



- 3 Press .

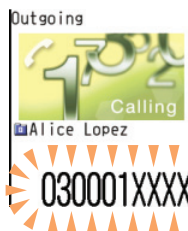

Note

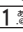- When Simple Mode is set, you can make calls to pair partners registered using the Pair function by simply holding down one of the keypad keys ( to ) for at least one second (one-touch dialing).


Editing Phone Book Entries

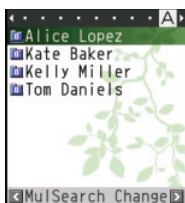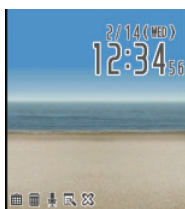

Select the entry
you want to edit
and press
(Select).




- 1 Press (Option) and then press 1 (Edit).

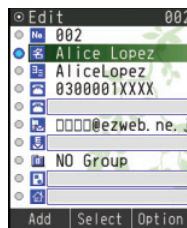

- 2 Edit the contents and then press (Add).



- 3 Use (Select) to select *Overwrite* and then press (OK).

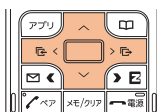





Note

- In step 1, you can delete the selected address by pressing 2 (Delete) after you press (Option).


Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book


- When the standby screen is displayed, press  and use  to select the phone number you want to save.

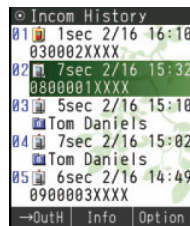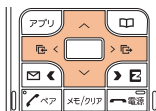


- Press  (Option) and then press  *Add Phone Book*.

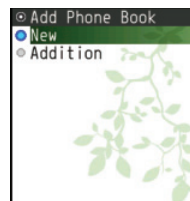

- Use  to select *New* and then press  (Select).

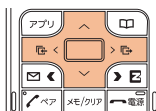


Note


- For details on saving a phone book entry, see page 45.
- To open the Outgoing History screen for saving a phone number to the phone book, press  in Step 1.



Pair Function



You can register a maximum of five pair partners you contact often to easily call or send mail. You can also invite pair partners to a Hello Messenger meeting.


Registering a Pair Partner

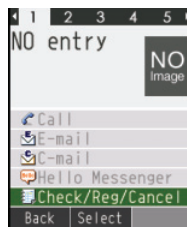

- 1 When the standby screen is displayed, press  .

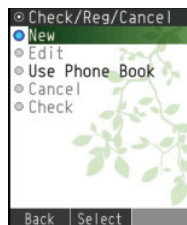
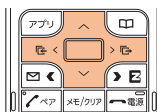


- 2 Use  to select the *NO entry* screen and then press  (Select).



- If you select the already-registered pair partner, use  to select *Edit* to edit the registered contents or select *Cancel* to cancel the pair partner.

 - 3 Use  to select *New* and then press  (Select).

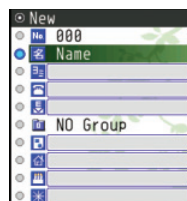


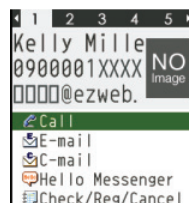
- 4 Perform the procedure under "Saving a Phone Book Entry" on page 45.


Note


- The member that you register in the Pair function is also registered in the phone book.
- When you delete the phone book entry registered in the pair partner, the phone book entry is also deleted from the Pair function.


Making a Call to a Pair Partner


- 1 When the standby screen is displayed, press  .





- 2 Use  to select the person you want to call.

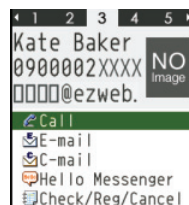

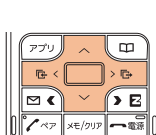

- 3 Use  to select *Call* and then press  (Select).




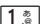

Note


- If multiple phone numbers and e-mail addresses are registered in a phone book entry, you can select the phone number and e-mail address to use with the Pair function.
- When Simple Mode is set, you can call pair partners by simply holding down one of the keypad keys ( to ) registered for up to five partners for at least one second.

Sending a Mail to a Pair Partner

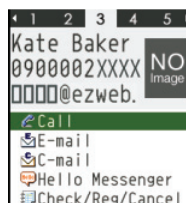- When the standby screen is displayed, press  and then use  to select the person you want to send a mail.



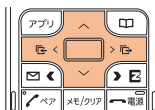


- Use  to select **E-mail** or **C-mail** and then press  (**Select**).




- To create an e-mail message, see "Creating and Sending E-mail Messages" on page 54. To create a c-mail message, see "Creating and Sending C-mail Messages" on page 62.

Inviting Members to a Hello Messenger Meeting from the Pair Partner Function

- When the standby screen is displayed, press  and then use  to select the member you want to invite.

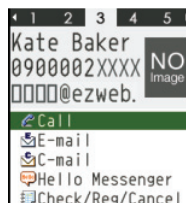

- Use  to select **Hello Messenger** and then press  (**Select**).

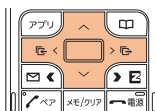


- For the following procedure, see Steps 3 and 4 of "Inviting Members to a Meeting" on page 67.

Using E-mail



To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

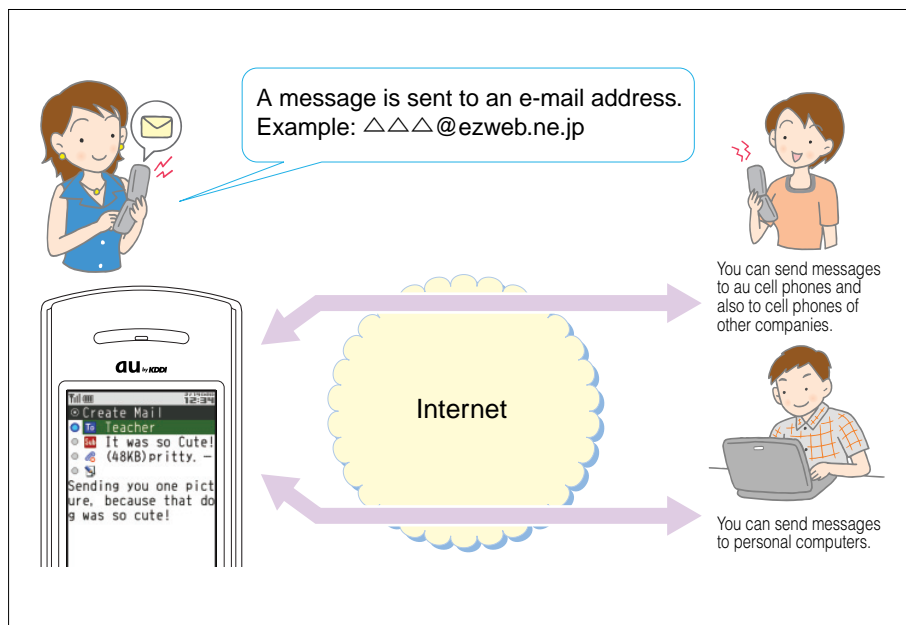
You can send and receive e-mail with another cell phone that supports e-mail, or with a computer. In addition to text messages that can contain up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.





- * You can send an e-mail message to up to five different addresses at one time.
- * You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- * Sending and receiving e-mail messages that include attachment data may take a while.

Creating and Sending E-mail Messages

- When the standby screen is displayed, press  and then press  *Create New*.

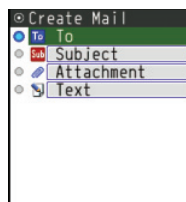


- Use  to select *To* and then press  (*Select*).

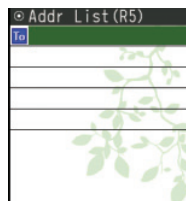
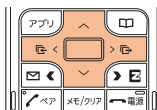


- Press  (*Select*) and then press  *Use Phone Book*.


- You can specify up to five addresses for the To, Cc, and Bcc fields.
- You can also select *Use Sent Hist* to specify an address or *Direct Input* to enter an address directly.

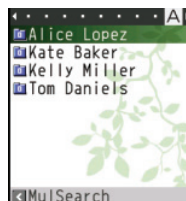

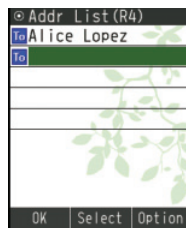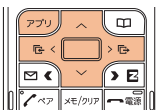


- Use  to select an address, press  (*Select*) and then press  (*OK*).

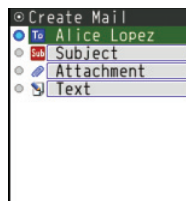


- Press  (*OK*).




- 6** Use  to select *Subject* and then press  (Select).


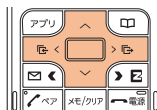


- 7** Enter a subject and then press  (OK).

- You cannot enter single-byte Japanese characters or a new line in a subject.

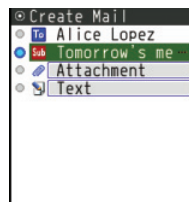


- 8** Use  to select *Text* and then press  (Select).

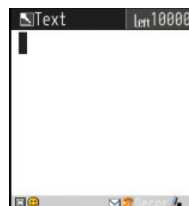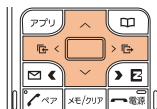

- 9** Enter the text of the message and then press  (OK).

- You cannot enter single-byte Japanese characters in the text of a message.

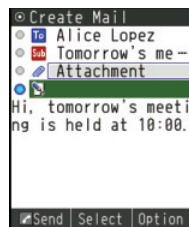


- 10** Press  ( Send).

→The e-mail message is sent.





Reading Received E-mail Messages

When you receive an e-mail message


→  *Email* appears on the standby screen along with the number of messages received.



1 Use  to select  *Email* and then press .

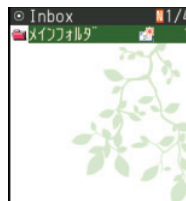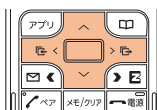



Indicators


 : Indicates a folder containing a new message.


2 Press  (Select).



Indicators


 : Indicates a read message.

 : Indicates an unread message.

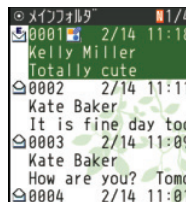 : Indicates a message that has an attachment.



3 Use  to select the new message and then press  (Select).

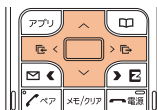

Viewing a Received Message

Sender of the message
The e-mail address of the sender may appear in place of the name.

Message subject



Time and date the message was received


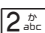
Message text

Name of attached file, if any
See page 58.


Note


- The procedure may differ depending on the e-mail settings.

Reading an E-mail Message from the E-mail Menu

When the standby screen is displayed, press  to display the E-mail menu and then press  *Inbox*.

Indicators

 X/X : The number on the right of the indicator indicates the number of unread messages.

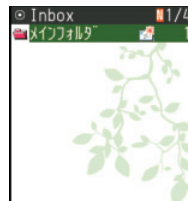




For subsequent operations, see "Reading Received E-mail Messages" (Steps 2 and 3 on page 56).



Reading an E-mail Message with an Attached Photo or Movie

Example: Viewing an attached photo

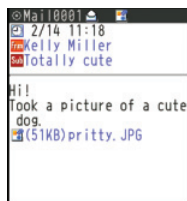1 Display the e-mail message (page 56).




2 Use  to select the file name and then press  (Rcv).

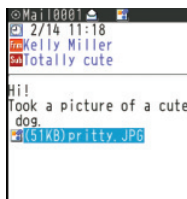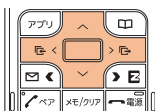

3 Press  (Play).




Note


- Some files will already be displayed on the screen in Step 1, while other files will require that you select the file name (Step 2), and then press  (Play). It depends on the file size.



Replying to Received E-mail Messages


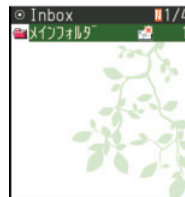
- When the standby screen is displayed, press  and then press **2**  *Inbox*.

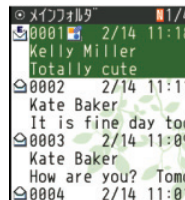

- Press  (Select).




- Use  to select the message you want to reply to and then press  (Select).

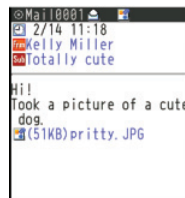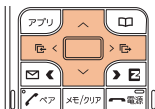


- Press **アプリ** (Reply).

➔The Create Mail screen appears. "Re:" is prefixed to the subject, and the text of the message is quoted.

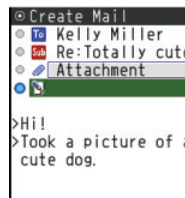

- Refer to "Creating and Sending E-mail Messages" (Steps 8 and 9 on page 55) and enter the text of the message.

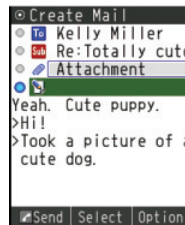

- Press **アプリ** ( Send).

➔The e-mail message is sent.



Rejecting Spam

The setting of mail filters to reject spam is recommended. Also, selecting **サポート設定** (Supportive Settings) enables you to set mail filters easily while answering questions that appear on the screen.



Setting Mail Filters



Example: Connecting to **サポート設定** (Supportive Settings)


When the standby screen is displayed, press .

➡ Press  **E-mail Setup**.

➡ Press  **Mail Filter**.



➡ Use  to select **次へ** (Next) and then press  (Select).

➡ Use  to select the input box and then press  (Edit).

➡ Enter your security code, press  (OK), and then follow the on-screen instructions.

- Your security code is the four-digit number you wrote on your subscription form.

Mail filter setting screen

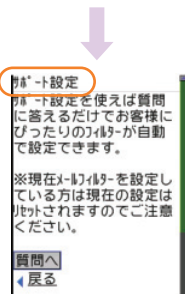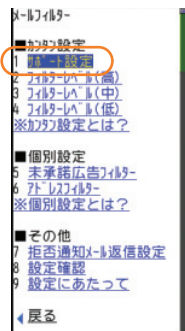

カンタン設定 (Simple Settings)


サポート設定 (Supportive Settings)	Set mail filters by just answering questions This is recommended for users who want to configure settings while confirming conditions.
フィルターレベル (高) Filter Level (High)	Shut out all mail from personal computers This is recommended for users who only want to receive mail from cell phones.
フィルターレベル (中) Filter Level (Medium)	Specify the mail of persistent senders to be blocked This is recommended for users being bothered by a certain person or by senders of spam mail.
フィルターレベル (低) Filter Level (Low)	Block unsolicited advertisement and spoof mail This is the minimum level recommended for all users.

Note

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 26.

Using C-mail

C-mail is a service that enables the use of phone numbers as addresses to exchange messages between au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters.

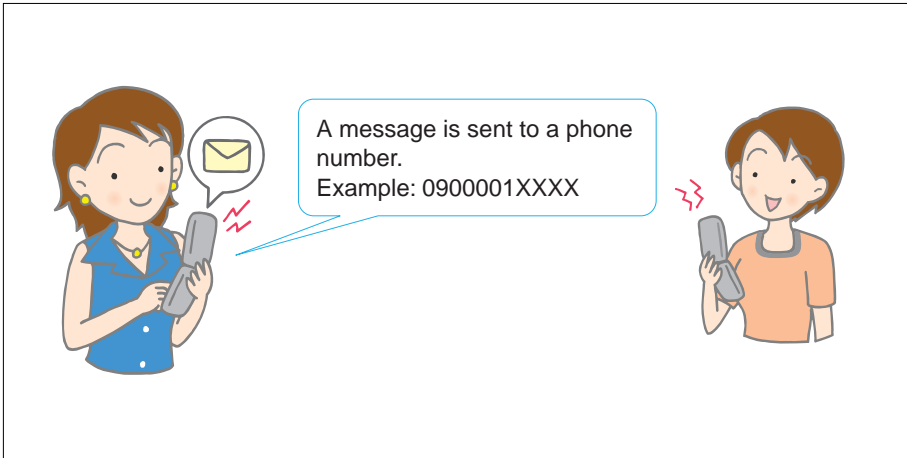
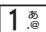



C-mail Safety Block

C-mail safety block is a function that allows you to reject to receive c-mails that include accessing URL (<http://△△△>, <https://△△△>) or phone numbers in the c-mail message text.


C-mail safety block is valid by default. You can cancel the setting if you want to receive c-mails that include accessing URL or phone numbers in the message text.



Creating and Sending C-mail Messages

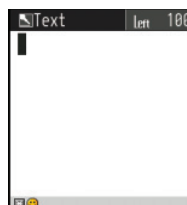- When the standby screen is displayed, hold down  for at least one second, and then press  *Create New*.





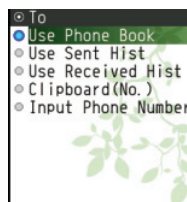

- Enter the text of the message and then press  (OK).




- Use  to select *Use Phone Book* and then press  (Select).

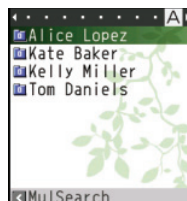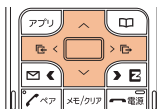• You can also select *Use Sent Hist*, *Use Received Hist* or *Clipboard (No.)* to specify an address or *Input Phone Number* to enter an address directly.



- Use  to select an address and then press  (Select) twice.

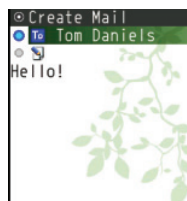


- Press  (Send).
→The c-mail message is sent.



Reading Received C-mail Messages


Received c-mail messages are saved to the Inbox.

When you receive a c-mail message



→  *Cmail* appears on the standby screen along with the number of received messages.



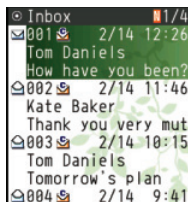

1 Use  to select  *Cmail* and then press .




Indicators



-  : Indicates a read message.
-  : Indicates an unread message.

Mail

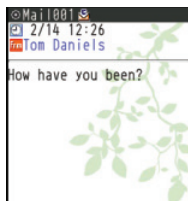
2 Use  to select the new message and then press  (Select).






Reading a C-mail Message from the C-mail Menu

When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, and then press  *Inbox*.

Indicators

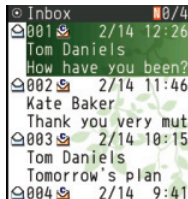
 X/X : The number on the right of the indicator indicates the number of unread messages.



Use  to select the message you want to read and then press  (Select).

Hello Messenger

Hello Messenger is a service that enables you to use a desired cartoon-style character to represent you in a meeting (exchange text, sound, and other data in real time) between au cell phones that support Hello Messenger. The host can select up to four members from the phone book to join the meeting.

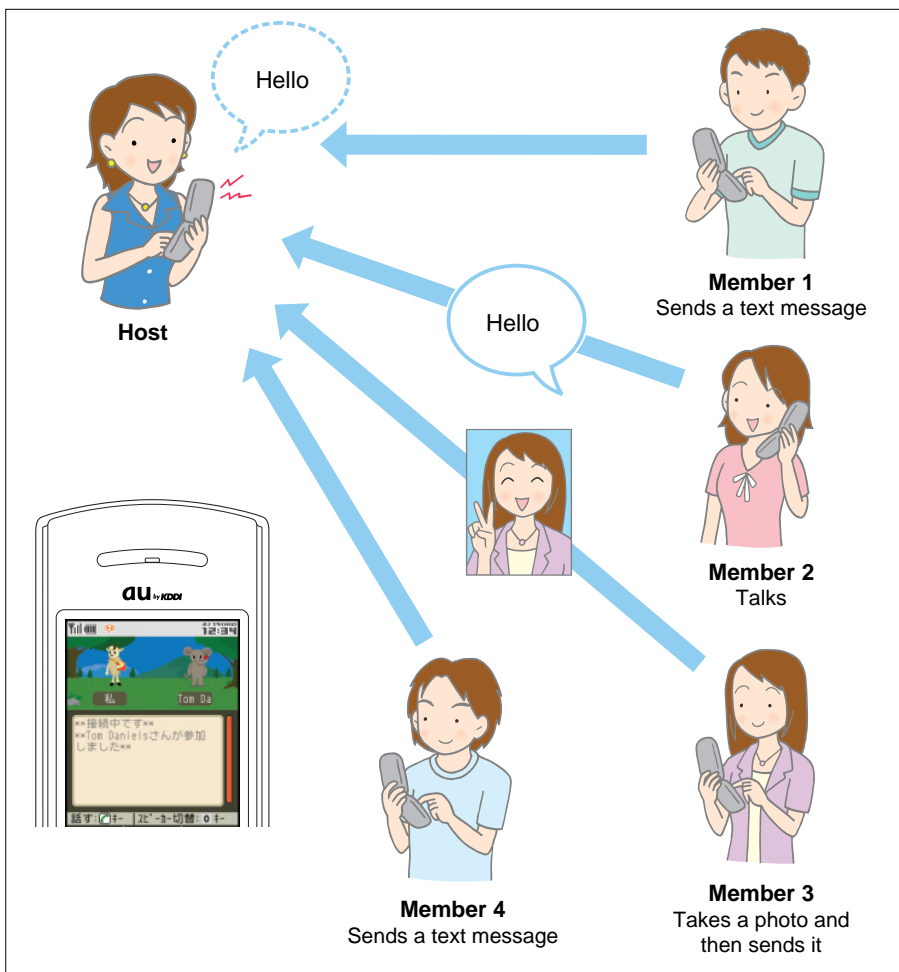


Note


- Conditions such as frequent-use, location, and signal strength may result in battery power not lasting as long as usual.
- This service can be used by two to five members.

Displaying Hello Messenger

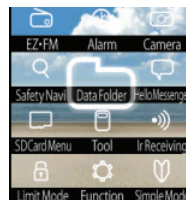


- When the standby screen is displayed, press .

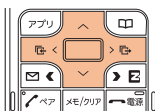

- Use  to select *Hello Messenger* and then press  (Select).



When Starting Hello Messenger for the First Time

Press  (OK), use  to select your character, and then press  (設定[Set]).



スタート (Start)

Select the members to invite and then start the meeting.

コメントログ (Comment Log)

Display the comment log (meeting history).


ヒント (Hint)

Display information on the basic operations of Hello Messenger.

オプション (Options)

Configure Hello Messenger settings.

Character list

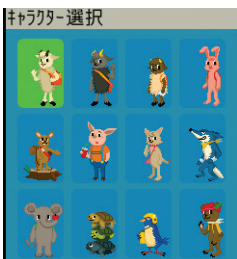


You can select from 12 different characters for Hello Messenger.

©Yamashita Kohei / mountain mountain

Holding a Meeting

You can start a meeting by selecting the members to invite to the meeting from the phone book, a group, or the hello ranking (members that you invited or that invited you to a meeting in the past), or use the Pair function to start a meeting.

The flow for inviting members to a meeting is as follows.

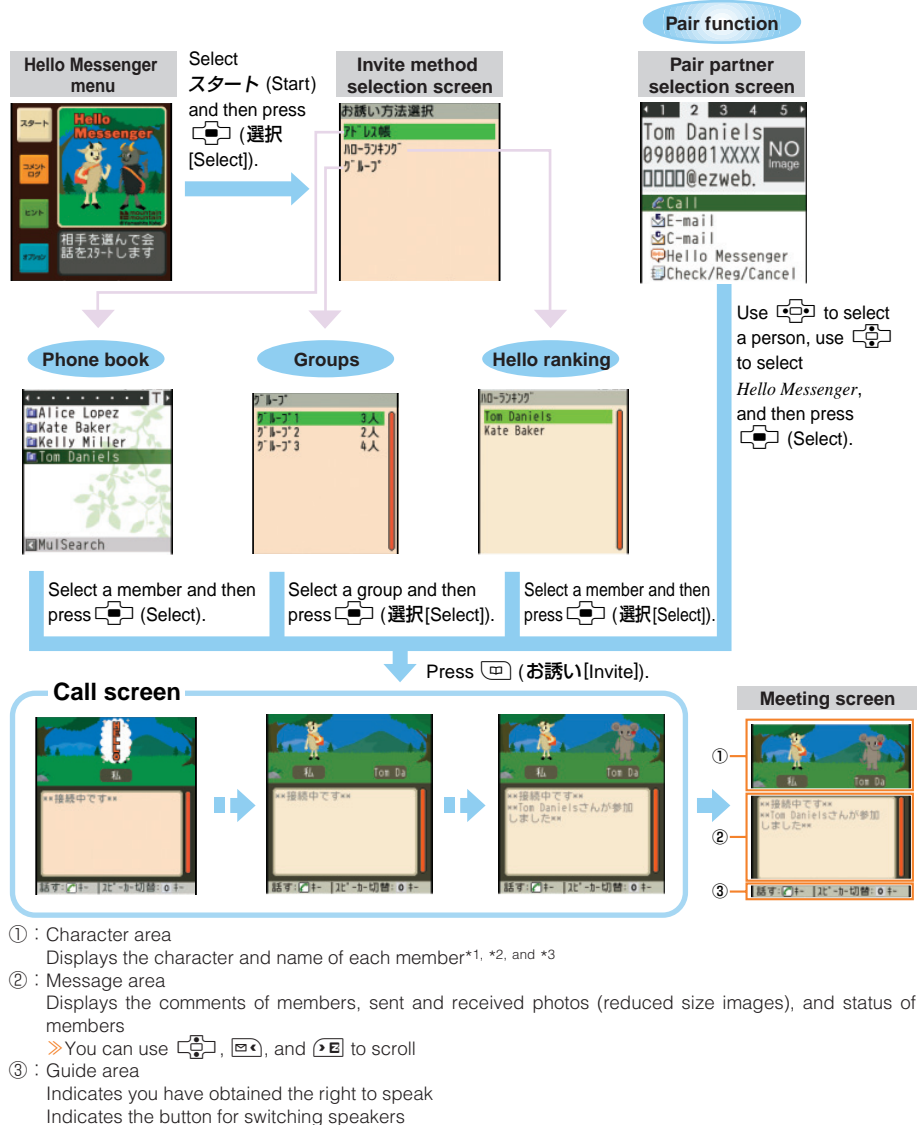



*1 The character changes in accordance with the status of a member.



*2 The name registered in your profile is displayed as your name. If no name is registered in your profile, 私 (Me) is displayed.



*3 If the phone number and name of the other party is registered in the phone book, the name registered in the phone book is displayed.



Inviting Members to a Meeting

You can start a meeting by inviting members registered in the members list.

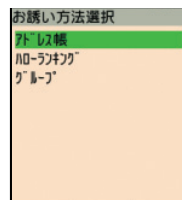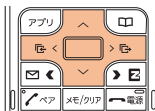



- 1 Use  to select **スタート** (Start) from the Hello Messenger menu (see page 65) and then press  (**選択[Select]**).

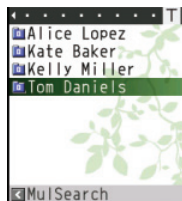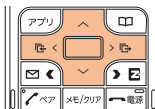



- 2 Use  to select **アドレス帳** (Phone Book) and then press  (**選択[Select]**).



- You can also select **ハローランキン** **グ/グループ** (Hello Ranking/Group) to specify the members to invite.


- 3 Use  to select the member you want to invite to the meeting, press  (**Select**), and then use  to select the phone number and press  (**Select**).

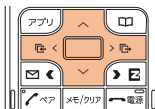

- Your name (the name registered in the profile) is the first name displayed in the members list, and cannot be changed or deleted. If no name is registered in your profile, **私** (Me) is displayed.
- To add another member, press  (**選択[Select]**) and then repeat Steps 2 to 3.

- 4 Press  (**お誘い[Invite]**).

- An invitation notification is sent to members registered in the members list.
- When the message **〇〇さんが参加しました** (XXX Has Joined the Meeting) appears, the meeting can start.

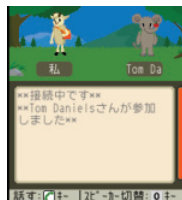

Note

- You can register up to five members to the members list including yourself.
- You can also start Hello Messenger from the phone book, outgoing history, incoming history, and phone number input, and then start a meeting.



Accepting an Invitation to Join a Meeting



When you receive an invitation to a meeting, the ring tone sounds and/or the cell phone vibrates, and then a message inviting you to join the meeting appears. However, if 着信モード (Incoming Mode) is set to 自動応答モード (Auto Answer Mode), you join the meeting automatically without the ring tone sounding.


When you receive an invitation

- A message (incoming call screen) inviting you to join the meeting appears.
- You can confirm the name of the host that invited you, the total number of members, and reception time on the incoming call screen.



1 Use  to select **参加 (Join)** and then press  (OK).

- The meeting screen appears and you can join the meeting.
- To reject the invitation to join the meeting, use  to select **不参加 (Do Not Join)** and then press  (OK).

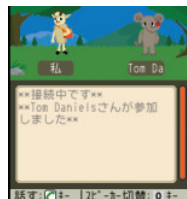

Note

- The ring tone is not heard from the speaker and earphones when manner mode is turned on.
- Even if manner mode is turned on, priority for vibrator operation is given to the vibrator setting of the **ハロ-着信音** (Hello Ring Tone) settings.

Camera

Your cell phone has a 1.3 megapixel camera (1,300,000 pixels available) that you can use to shoot photos and movies. It also has a self-timer for taking photos.

You can use images you record for the standby screen, and you can attach them to e-mail messages.


Camera Image Features

Using Images



You can use images for screens such as the standby screen and call screen, and you can include them in phone book entries.

Sending Images

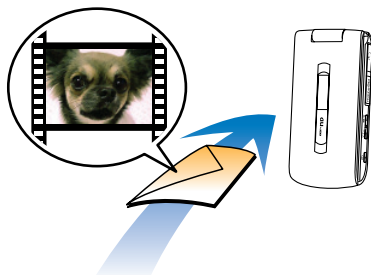


You can attach images up to 500 KB in size to e-mail messages.

Captured Images



microSD™ memory card
(Commercially available)

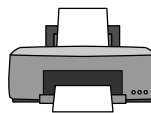

Print out



Display with a personal computer


You can use a microSD™ memory card to transfer captured images to a personal computer or printer.

Displaying and Printing Images

Photo and Movie Shooting Tips


When shooting photos or movies, frame the subject within the display and hold the A5523T steady with both hands to avoid shaking.

When oriented vertically

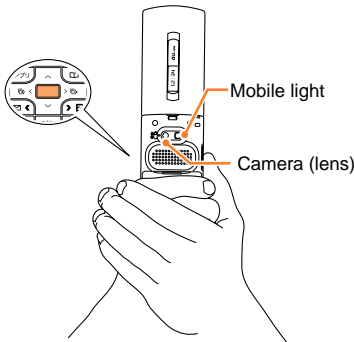

Orient the A5523T so appears in the upper left of the display.

When oriented horizontally

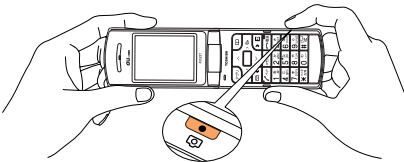

Orient the A5523T so appears in the upper left of the display.

About Photo and Movie Modes

The following modes are available for capturing photos and movies.

Photo Modes

(The default mode is *Wallpaper*.)

Mode	Save Location
Photo Mail : 120 (W) × 160 (H) dots	The Photo Folder in the Data Folder of the cell phone.
Wallpaper/Multiple Shots : 240 (W) × 320 (H) dots	
VGA : 640 (W) × 480 (H) dots	The Digi-Came Fldr in the microSD™ memory card.*
SXGA : 1280 (W) × 960 (H) dots	

Movie Modes

(The default mode is *HIGH L*.)


Mode	Save Location
STD S : 96 (W) × 80 (H) dots	The Movie Folder in the Data Folder of the cell phone.
STD M, HIGH M : 128 (W) × 96 (H) dots	
HIGH L : 176 (W) × 144 (H) dots	
FULL : 320 (W) × 240 (H) dots	The Movie Folder in the microSD™ memory card.*

* When a microSD™ memory card (commercially available) is not inserted, the files are saved to the Data Folder of the cell phone.


Note



- To turn on the mobile light, press while the monitor screen is displayed.
- If you press () while the monitor screen is displayed, the key-operation guidance screen will appear for approximately fifteen seconds.
- Confirm the positions of the lens and mobile light, and take care not to cover these parts with a strap or finger.

Taking a Photo


- When the standby screen is displayed, hold down  for at least one second.

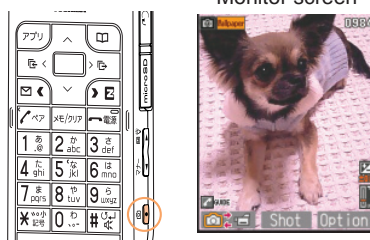→The monitor screen appears.



- Point the lens at the subject and then press  (Shot) or .


→The photo you just took appears.

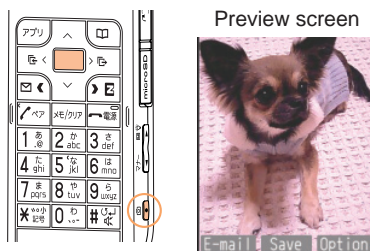

Saving a Photo

Press  (Save) in the preview screen.

Note

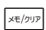- If you do not want to save the photo, press  in the preview screen.
- The following shows how to read the file name in the Data Folder when you take a photo in the Wallpaper mode.


File Name Example : 070214_1234~01


Recording Date: February 14, 2007


Time: 12:34



Serial Number: Photo 1

Recording a Movie

- When the standby screen is displayed, press .

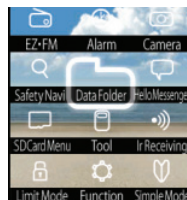


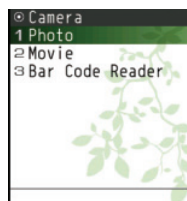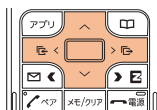

- Use  to select *Camera* and then press  (Select).




- Press  *Movie*.

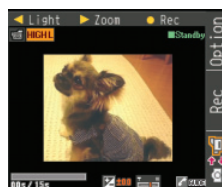→The monitor screen appears.



- Point the lens at the subject and then press  (Rec) or .

→The cell phone emits a recording start sound, and  lights when recording starts.



Stopping Recording

Press  (Stop) or .

When You Stop Recording or the Recording Time Elapses

The first frame of the movie you just recorded appears (preview screen).


Preview screen

Playing Back a Movie Before it is Saved




Press  (Option), use  to select *Play*, and then press  (Select).

Saving a Movie

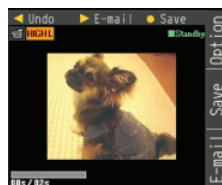Press  (Save) in the preview screen.

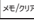

Note



- If you do not want to save the movie, press  in the preview screen, use  to select *Yes*, and then press  (OK).
- The following shows how to read the file name in the Data Folder when you record a movie in the High L mode.

File Name Example : 070214_1234~01

Recording Date: February 14, 2007 Time: 12:34 Serial Number: 1

Attaching Photos or Movies to E-mail Messages


1 While the preview screen is displayed after shooting a photo or movie, press  (E-mail).



- ➔ The photo or movie is attached to an e-mail message and the Create Mail screen appears.
- The  (Attachment) indicator changes automatically to , indicating that an image has been attached. For details on creating an e-mail message, see page 54.



Viewing Photos or Movies

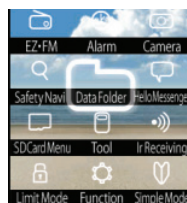

Example: Viewing a photo

- 1 When the standby screen is displayed, press .

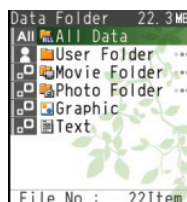
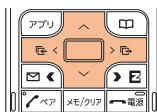



- 2 Use  to select *Data Folder* and then press  (Select).







- 3 Use  to select *Photo Folder* and then press  (Select).

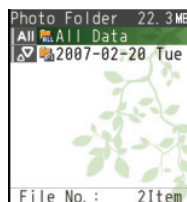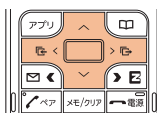
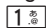
• To view a movie, select *Movie Folder*.

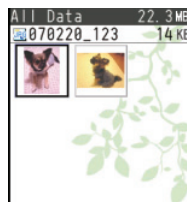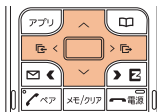


- 4 Use  to select a folder and then press  (Select).



- 5 Use  to select the photo you want to view and then press  (Play).


• You can attach the photo to an e-mail message by pressing  (Option) and  AttachToE-mail.

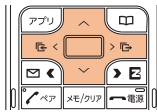

EZweb is an information service that allows you to enjoy using the Internet on your cell phone. You can also download Chaku-Uta®, news, and other data from web pages.

To use EZweb, you need to apply for an EZweb subscription.

If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

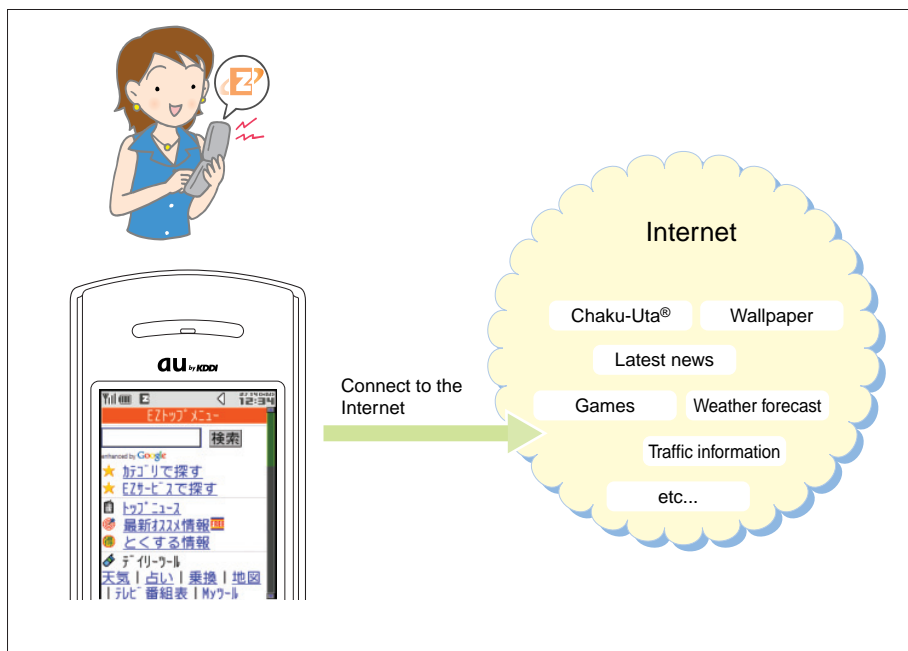

Note

- The layout and content of the screens in this manual are only for the purpose of explanation. The layout and content of actual screens may be different from the ones shown here.
- In addition to communication charges, some sites charge for providing information.


Accessing Sites

Viewing the EZ Top Menu

You can access EZweb from the Top menu. A variety of useful and fun sites are available on EZweb.




EZ menu
(EZweb menu)

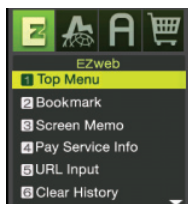

1 Top Menu

Top menu

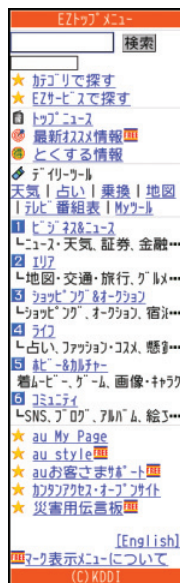

キーワード検索機能 (Search by Keyword)

Provides an information search function for searching by keyword.

カテゴリで探す (Search by Category)

Searches sites by category.

EZサービスで探す (Search by Useful EZ Service)

Introduces amusing and useful online services that EZweb offers.

トップニュース (Top News)

Provides automatic updates of the latest news.

最新オススメ情報 (Latest News)

Introduces useful information on sales campaigns and the latest items of interest.

とくする情報 (Valuable Information)

Presents gifts and push information to the EZweb subscriber for free.

デイリーツール (Daily Tools)

Provides daily bulletins such as weather reports and horoscopes as well as a train connections function.

ビジネス&ニュース (Business & News)

Provides the latest information, such as news and weather, and other useful information for your business.

エリア (Area)

Provides useful local information such as map searches and train connections.

ショッピング&オークション (Shopping & Auctions)

Provides shopping and auction information that you can use from your cell phone.

ライフ (Daily Life)

Provides useful information for daily living.

ホビー&カルチャー (Hobbies & Culture)

Provides the latest information, such as games, music and books, and popular information, such as hobbies and entertainment.

コミュニティ (Community)

Provides interesting and useful information that you can use for SNS or blogs.

au My Page

Provides useful information and tools tailored to your cell phone usage and a large area for storing files.

au style

Introduces information and sites that au recommends.

auお客さまサポート (au Customer Support)

Provides information about charges, various applications, au online manual and notices from au.

かんたんアクセス・オープンサイト (Simple Access & Open Site)

Provides easy access and introduces open sites.



災害用伝言板 (Disaster Message Board)



Register and confirm safety information in time of disaster.


English

Introduces English sites.







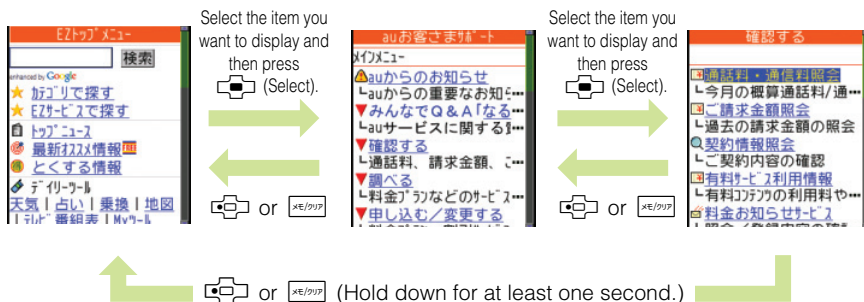

Basic Operations

Use  to select the site you want to access and then press  (Select).

Pressing  or  returns to the previous screen. Holding down either key for at least one second returns to the Top menu.




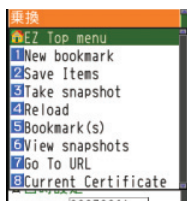
The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls the screen line-by-line.
 、 	When there is data available above or below the current screen, scrolls the screen page-by-page.  : Scrolls one page up.  : Scrolls one page down.
 、 	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

You can save the titles and URLs you often visit, which makes it easy to return to them when you want.

- 1 When the page you want to bookmark is displayed, press  (Browser menu).



- 2 Press  *New bookmark.*

• Some pages cannot be bookmarked.



- 3 Press  (Regist).



➡The displayed page is bookmarked, and its title and URL are added to the Bookmark.





Note


• The Bookmark can contain up to 100 titles and URLs.



Viewing Bookmarked Pages

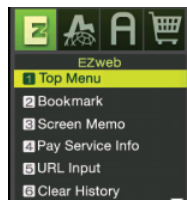- When the standby screen is displayed, press  and then use  to select the *EZweb*.

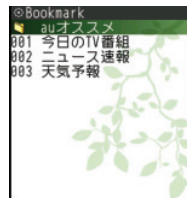


- Press  *Bookmark*.




- Use  to select the bookmark for the page you want to view and then press  (*Access*).


→The cell phone connects to the site.


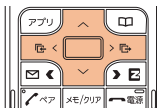



Checking Charges


You can use EZweb to check call charges, communication charges, and other information.

- When the standby screen is displayed, press .

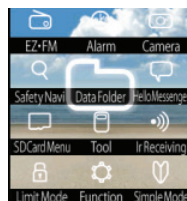

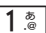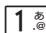
- Press   and then press  (*OK*).

- Select the item you want to check and then follow the on-screen instructions.

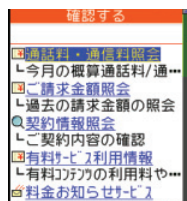



Downloading Chaku-Uta®

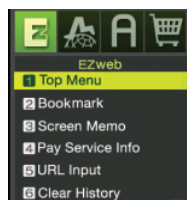
- When the standby screen is displayed, press  and then use  to select the *EZweb*.







- Press  *Top Menu*.



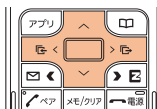


- Use  to select *カテゴリで探す* (Category Search) and then press  (Select).

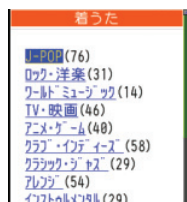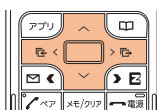

- Use  to select *着うた* (Chaku-Uta®) and then press  (Select).



- Use  to select the site you want to access and then press  (Select).

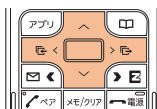


➡ The download procedure appears.

- To use information sites that charge for providing information, you need to enter your EZ password or Premium EZ password. Follow the on-screen instructions to enter the password.
See page 12 for details.


6 Follow the instructions that appear on the display.

- ➔Download is completed.
- Downloaded data is saved automatically to the Data Folder.

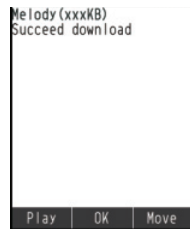


7 Press (Play).

- ➔The downloaded Chaku-Uta® plays.

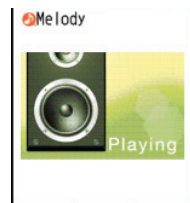


8 During playback, press (Register).

- ➔The Register to where? menu appears.

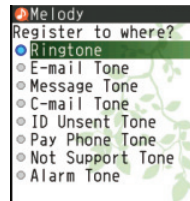

9 Use to select the tone you want to use the Chaku-Uta® for and then press (OK).

- ➔The Chaku-Uta® is set as a tone.
- You can use the same operation to download an image and set it to the standby screen, etc.

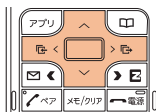


Note

- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

EZ Navi Features

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

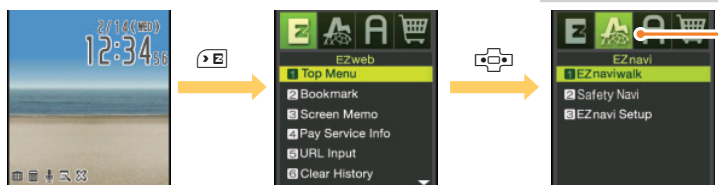

Safety Navi to check where your kids are

The Safety Navi application is made up of 3 functions.


- いつでも位置確認 (Auto Position Search [monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using Position Search from the A5523T enables you to locate an au cell phone equipped with Position Search.



- エリア通知 (Area Message [no monthly charge])

When you enter (or are in) or leave (or are no longer in) a specified area during a predetermined time period, this feature automatically sends a notification e-mail to a designated au cell phone.

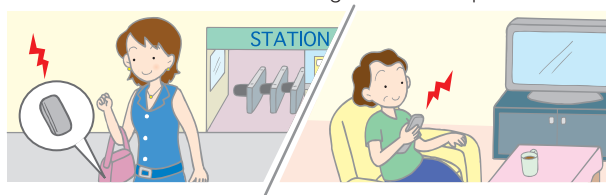

EZnaviwalk

Safety Navi

EZnavi Setup

Note

- You can also launch Safety Navi from the Launcher menu.
See page 22 for more information on using the Launcher menu.

EZ Navi Walk for when you go out

Displays various useful menu items for when you are out.



ナビをする ^{*1}	Search for the best route to your destination (音声ナビ[voice navigation]) or for local stores or facilities.
地図を見る (FREE) ^{*1}	Check out maps of your current location or places you like to go.
乗換検索する (FREE) ^{*1}	Search for train connections, timetables and other train service information.
道路情報を見る	Check out information on roads throughout Japan in real time.
もっとナビウォーク	Configure your settings or get help on PC searches.
インフォメーション	Sign up as a member or make an inquiry.

^{*1} You can use your voice to configure your settings (Voice input function).


^{*2} Some of the menu options attract a monthly charge.

Train Transfers



You just key in your departure station and destination station and this function will tell you which line to take, where to change trains, the train times and the trip duration. It even knows the times of the first and last trains.

My Spot

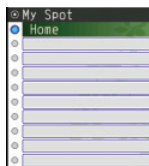

You register locations such as your home and the places you most often go, and this function provides simple navigation instructions.


A Map of Your Current Location



★ represents your initial location. As you start moving, changes of your location are tracked by continuous positioning and indicated in real time by 雲.

Selecting 今いる場所の地図 (A Map of Your Current Location) displays the current map in real time.

Current Mail

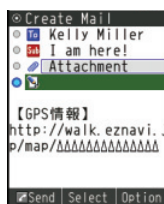

When, for example, you have arranged to meet someone, you can send a message to let the person know your current location.

Navigation engine by NAVITIME JAPAN
地図：昭文社／住友電工


Note

- Before using this function, you must first specify the EZweb initial settings. Set the initial settings prior to use. If you have not set the initial settings, see page 25.
- When you use EZ Navi, information charges apply in addition to the packet communication charge.
- The screen shown here is just one sample of the layout and the information displayed. The actual screen may differ.

What You Can Do with Safety Navi

Safety Navi lets you use your A5523T to check on the location of an au cell phone or have it sound an alarm to notify you when the au cell phone is in a particular area during a specified time period.

①いつでも位置確認(Auto Position Search)

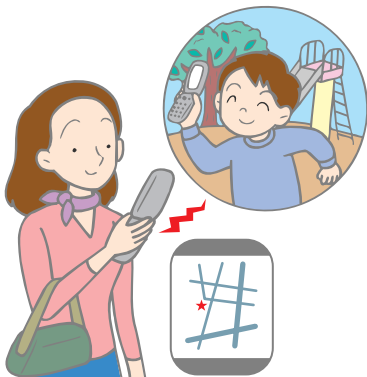


【Features】

You and your child can pre-register each other's cell phones. When you check your child's position, you will be able to know the current location automatically without your child having to do anything.

* A monthly fee payment is required for using this service.

Example: Searching for the location of your child

②位置確認メール(Position Search Mail)

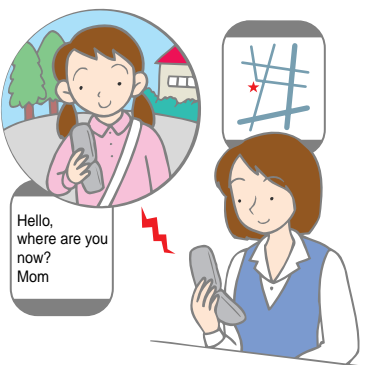

【Features】

You can send a message to your child to check his or her position. If your child is registered in the phone book, you can check your child's location easily even if you are not registered as a member for Position Search.

* Checking your child's location requires the child to operate his or her phone.

Example: Sending Position Search Mail to your child

③エリア通知(Area Message)



【Features】

You do not have to worry about your child even when he/she is out alone. The cell phone that he/she carries automatically sends you a message when he/she passes the specified area on his/her usual way back home from school, etc.

Example: An Area Message tells your child has just passed the area


Note

- Safety Navi services are available only between au cell phones that are compatible with those services.
- Before using Safety Navi, you need to agree to the terms of use for Safety Navi and set a Navi password when you first start Safety Navi.
 - * The terms of use also need to be agreed on the other cell phone.
- If the cell phone is having difficulty receiving a GPS satellite signal, in an underground shopping area, inside a building, or in the shadow of a building, the position displayed may differ from the actual position.
- If the cell phone obtains position information that differs from the actual position, the Area Message may not be accurate.
- Position Search is not available in such cases as when the cell phone you are searching for is out of range, rejecting to be searched or operating some other application; or when it is no longer compatible with Position Search because the relevant application has been deleted, etc.
- This service becomes unavailable, when The Use Suspension Course of Price Safety Service is activated and the charge reaches the upper limit.
- The screen images shown in this manual are only examples and may be different from the actual display.
- You cannot use Safety Navi if you have stopped using c-mail.
- If the M425 *EZapps Restrict* is set to *ON*, you can use Safety Navi by keying in the Lock No. and temporarily canceling the restriction. However, you cannot receive list registration notifications, Position Search notifications and you cannot launch Area Message at a specified time.
- EZapps transmission is included in the free calling time provided by your service plan. However, family c-mail and packet communications discount services do not apply.
- When the A5523T displays maps or collects Position Search information, information charges apply in addition to the packet communication charge.

You can use your A5523T to listen to the FM radio. You can also record songs broadcast over the radio.

Antenna


The bundled Toshiba flat-type stereo earphone 04 has a built-in antenna for listening to the FM radio. When you want to listen to EZ•FM radio, be sure to connect the earphone so that you can receive the signal.

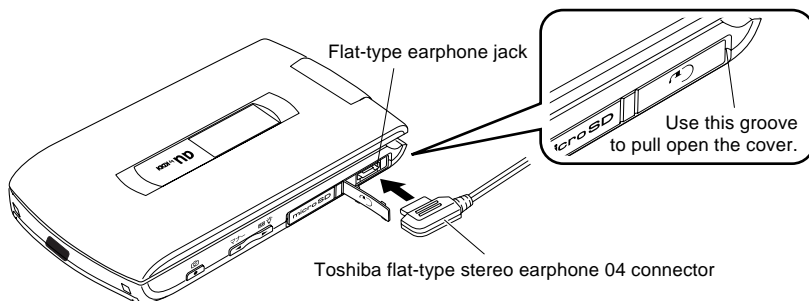






Note


- When you use the Toshiba flat-type stereo earphone 04, be sure to keep the connector straight when you plug it into the flat-type earphone jack.

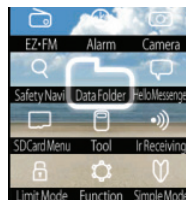Listening to EZ・FM

- 1** When the standby screen is displayed, press .



- 2** Use  to select **EZ・FM**, press  (Select), use  to select **承諾する** (Agree), and then press .

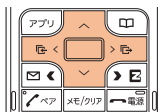


- Important notes are displayed.
- A screen for selecting your area appears the first time you start EZ・FM. Select the area you will use your cell phone.

Note

- Before using this feature, you must first specify the EZweb initial settings. If you have not set the initial settings, see page 25.
- Listening to EZ・FM is free of charge. However, packet communication charges apply for using services for displaying song names, etc.
- You can record EZ・FM broadcasts.
- The layout and content of the screens in this manual are only for the purpose of explanation. The layout and content of actual screens may be different from the ones shown here.
- If you are listening indoors, you may be able to improve the reception by moving closer to a window.



Basic Operations

EZ•FM Screen



The image shows the EZ•FM screen interface. Callouts point to various elements: 'Frequency display area' points to the top right; 'Displayed when there is downloadable information' points to a banner at the top; 'Speaker/Earphone toggle display' points to a speaker icon; 'Station/Song name display area' points to the 'Real Music' text; and 'Banner display area' points to the bottom section containing song and station information.


Frequency display area

- You can use  to manually select a station in increments of 0.1 MHz.
- You can hold  for at least one second to automatically select a station.

Displayed when there is downloadable information








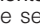







Speaker/Earphone toggle display

Station/Song name display area

- The name of the broadcast station is normally displayed.
- You can display information such as the artist name and song name by pressing  (song name display). Information may not be provided depending on the program.

Banner display area

Controlling the radio

Key used	Action
	Changes the station. By pressing any key from  to  , you can switch between the radio stations assigned to the different keys.
 ⇒ 	Tunes the radio in 0.1 MHz increments. <ul style="list-style-type: none">• Hold down  for at least one second to automatically tune the radio.• You can enter the frequency directly using the keypad keys ( to ).
 、 	Raises the volume.
 、 	Lowers the volume.
	Exits EZ•FM. Use  to select <i>Exit</i> and then press  (OK).

Switching to Background Music Reception or Exiting EZ•FM

1

Press  and then press

 *Suspend (BGM) or*

 *Exit.*



Note

- When you first purchase the A5523T, it is set to automatically exit EZ•FM if you do not press any of the keys for approximately 2 hours. You can change this in the **ラジオ自動終了** (Auto Radio Exit) setting.


Limit Mode

Limit Mode allows a parent or superior to limit how much each function can be used to prevent overuse of the cell phone by a child or subordinate. Limits can be placed on incoming and outgoing calls and c-mail.



Registering Permitted Members

If you register permitted members, your cell phone allows incoming and outgoing calls and c-mail from/to them regardless of the Use Limit settings.


- When the standby screen is displayed, press .

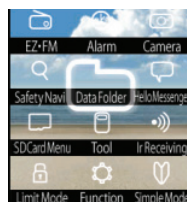

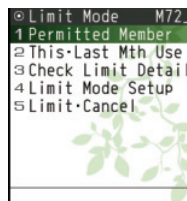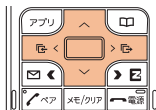


- Use  to select *Limit Mode* and then press  (Select).

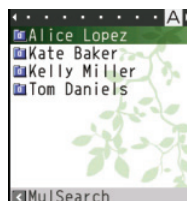


- Press  *Permitted Member*.



- 4 Use  to select a phone book entry and then press  (Select).

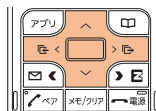

- 5 Press  (OK).

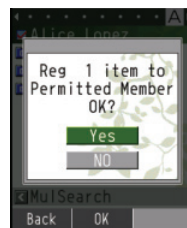

- 6 Use  to select *Yes* and then press  (OK).




Limiting Calls and C-mail



You can limit incoming and outgoing calls and c-mail (Access Limit).

Example: Only allowing outgoing calls to permitted members

- 1 When the standby screen is displayed, press .

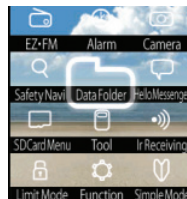


- 2 Use  to select *Limit Mode* and then press  (Select).

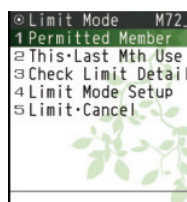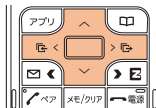




- 3 Press  *Limit Mode Setup*.





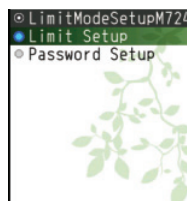

- 4 Enter your Limit Mode password and then press  (OK).



• The initial default password is "12345678".



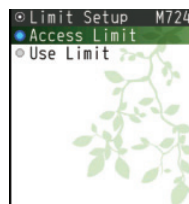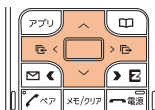


- 5** Use  to select *Limit Setup* and then press  (Select).



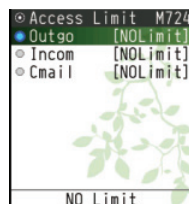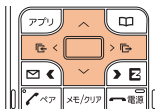

- 6** Use  to select *Access Limit* and then press  (Select).

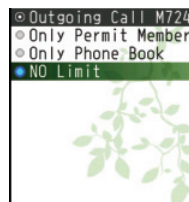

- 7** Use  to select *Outgo* and then press  (Select).



- 8** Use  to select *Only Permit Member* and then press  (Select).




Setting Use Limits



You can configure your cell phone to prohibit outgoing calls and/or c-mail if the monthly planned use limit will be exceeded.

Example: Limiting the call amount

- 1 When the standby screen is displayed, press .

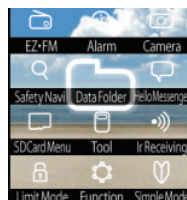


- 2 Use  to select *Limit Mode* and then press  (Select).

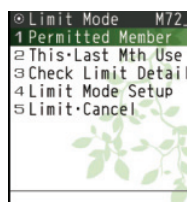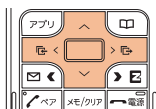




- 3 Press  *Limit Mode Setup*.





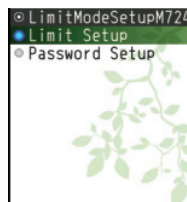

- 4 Enter your Limit Mode password and then press  (OK).



- The initial default password is "12345678".

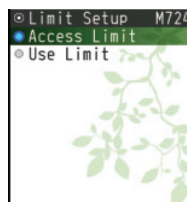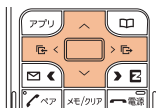


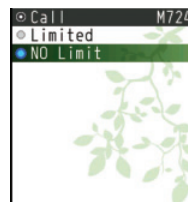
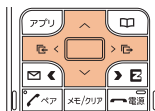
- 5 Use  to select *Limit Setup* and then press  (Select).



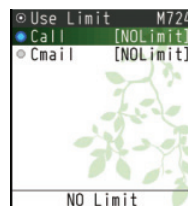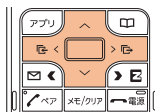



6 Use  to select *Use Limit* and then press  (**Select**).



7 Use  to select *Call* and then press  (**Select**).



8 Use  to select *Limited* and then press  (**Select**).

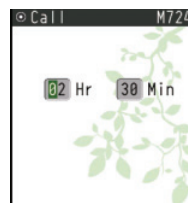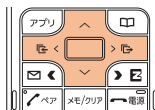


9 Enter the call amount and then press  (**OK**).




Note



- Your cell phone does not place limits on outgoing calls and c-mail to permitted members even if the set use amount will be exceeded.

Turning Limit Mode On and Off


- 1 When the standby screen is displayed, press .

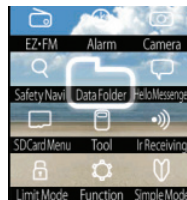


- 2 Use  to select *Limit Mode* and then press  (Select).

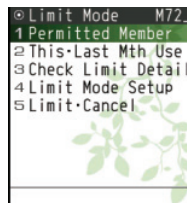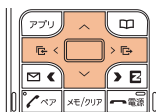


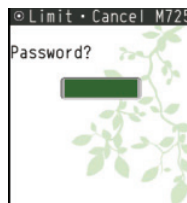

- 3 Press  *Limit Cancel*.



- 4 Enter your Limit Mode password and then press  (OK).

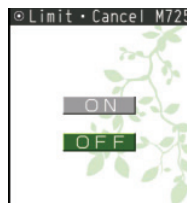• The initial default password is "12345678".



- 5 Use  to select *ON* and then press  (OK).



Note


- You can change your Limit Mode password.



Simple Mode



Setting Simple Mode enables limited and simplified operations of the phone function, phone book, camera, mail, EZweb and other often-used functions.

Entering Simple Mode

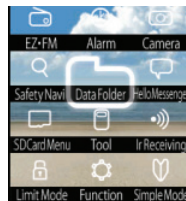
- 1 When the standby screen is displayed, press .



- 2 Use  to select *Simple Mode* and then press  (Select).

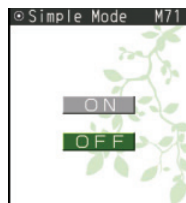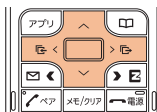


- 3 Use  to select *ON* and then press  (OK).
➔ This enters Simple Mode.


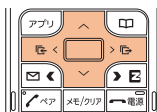




Exiting Simple Mode


- 1 When the standby screen is displayed, press .

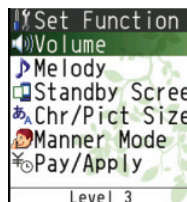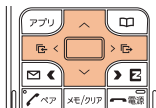

- 2 Use  to select *Setup* and then press  (Select).



- 3 Use  to select *End Simple Mode* and then press  (Select).

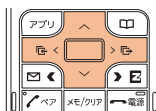

- 4 Use  to select *Yes* and then press  (OK).

➔ This exits Simple Mode.



Note

- If you cancel Simple Mode, the standby screen wallpaper selected in Simple Mode is still displayed in normal mode.

Viewing the Display in Simple Mode

The following indicators are available for checking the status on the standby display when your cell phone is in Simple Mode.



Indicator	Description
①	Indicates signal strength.
②	Indicates battery level.
③ —	Indicates the current date and time.
④	Indicates the manner mode is turned on.
⑤	Indicates the voice memo or manner mode is turned on.
⑥	Indicates the side keys are locked.
⑦	Indicates a microSD™ memory card (commercially available) is inserted.
⑧ —	Display the alert window.

* is displayed when you missed a call to notify you that someone called (missed call).





About the Alert Window

The alert window appears when you are unable to answer a call or a message is received. Use to select an item and press to check its details.


Note







- The date and time are set automatically.
- The layout and content of the screens in this manual are only for the purpose of explanation. The layout and content of actual screens may be different from the ones shown here.
- If *Hamabe* (the default setting) is selected as the standby screen wallpaper in normal mode, the wallpaper when you switch to Simple Mode is set to *Tebiki*. If something other than *Hamabe* is selected as the standby screen wallpaper in normal mode, the same wallpaper is displayed when you switch to Simple Mode.

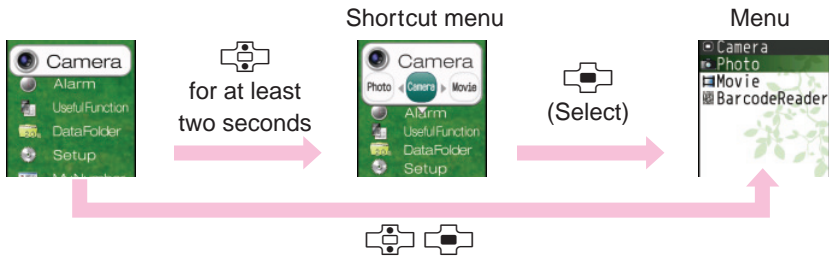Viewing the Simple Menu

You can display the Simple menu by pressing  when the standby screen is displayed. If you use  to select a function and then wait at least two seconds, the Shortcut menu appears. Also, if you use  to select a function and then press  (Select), a menu appears.

Example: To view the Camera menu




Indicator	Function Name	
	Camera	Photo Movie Barcode Reader
	Alarm	
	Useful Function	Calendar Notepad Calculator Ir EZ•FM Toshiba Site
	Data Folder	All Photo Folder Movie Folder SD Card
	Setup	Volume Melody Standby Screen Character/Pict Size Manner Mode Pay/Apply End Simple Mode
	My Number	


Note


- For details on the key assignment and basic operations, see page 14.
- For details on how to use phone functions, see “Making and Answering Calls” on pages 29 to 39.

Using the Simple EZ Menu

The Simple EZ menu provides a quick and simple way to access functions such as EZweb and EZ Navi.

When the standby screen is displayed, press  to display the Simple EZ menu.

Use  to select a menu item, press  (Select), use  to select a function, and then press  (Select).

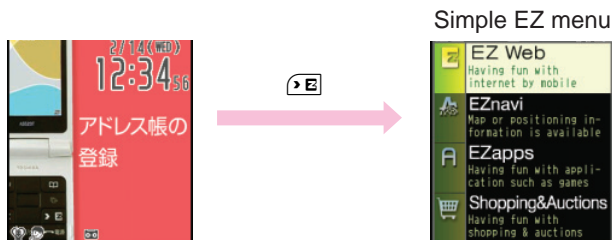

You can access the following functions from the EZ menu while the cell phone is in Simple Mode.

EZweb

- Top Menu
- Bookmark
- Pay Service Info
- Clear History
- Last Screen

EZnavi

- EZnaviwalk
- Safety Navi

EZapps


- EZ Game Street!
- To Search EZapps!
- EZapps Menu

Shopping&Auctions


- JumpTo Shopping&Auctions
- JumpTo Shopping Mall
- JumpTo au Auctions
- JumpTo au Records
- JumpTo au Books
- JumpTo au Games


Saving a Phone Book Entry Using Simple Mode


- 1** When the standby screen is displayed, press .

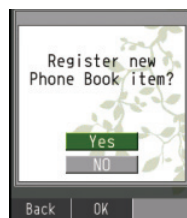



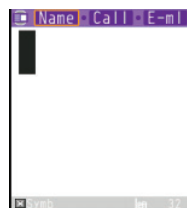

- 2** Use  to select *Yes* and then press  (OK).


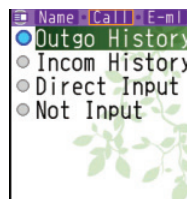



- 3** Enter a name and then press  (OK).




- 4** Use  to select *Direct Input* and then press  (Select).

- If you do not want to enter a phone number, use  to select *Not Input*, press  (Select), and then proceed to Step 6.
- You can also use  to select *Outgo History* or *Incom History* and enter a phone number from there.

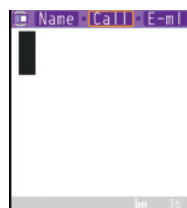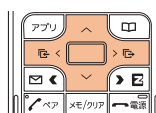
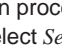



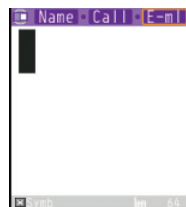
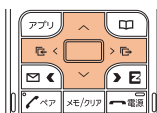
- 5** Enter a phone number and then press  (OK).

- If the phone number is for a regular phone, enter the phone number starting with the area code.

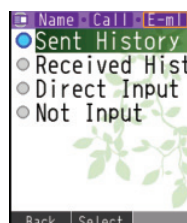
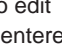


6 Use to select *Direct Input* and then press (Select).

- If you do not want to enter an e-mail address, use  to select *Not Input*, press  (Select), and then proceed to Step 8.
- You can also use  to select *Sent History* or *Received Hist* and enter an e-mail address from there.



7 Enter an e-mail address and then press (OK).

- You can use  to select an item and then press  (Edit) to edit something you have already entered, or to configure call ring tone and mail ring tone settings.





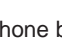
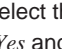




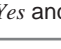


8 Press (Add).

→The entry is saved in the phone book.

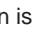

Note

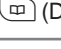

- When you have already stored data in the phone book, pressing  while the standby screen is displayed displays a phone book list. To store new phone book data, press  (New) and perform Steps 3 through 8 of the above procedure.
- To edit phone book contents, press  while the standby screen is displayed. Use  to select the phone book entry you want to edit, press  (Select), and then press  (Edit).
- To delete an entry stored in the phone book, press  when the standby screen is displayed and then use  to select the entry you want to delete. Press  (Delete), use  to select *Yes* and then press  (OK).

Creating and Sending E-mail/C-mail Messages in Simple Mode



Example : Creating and sending an e-mail message

- 1** When the standby screen is displayed, press .







- 2** Use  to select *E-mail* and then press  (Select).

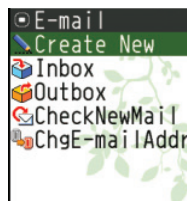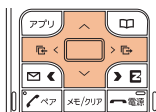
- To create a c-mail message, select *C-mail*. With c-mail you enter the text first and then enter the address.




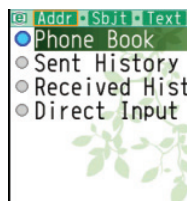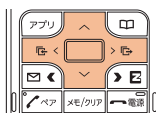

- 3** Use  to select *Create New* and then press  (Select).






- 4** Use  to select *Phone Book* and then press  (Select).

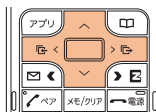
- You can specify only one address.
- Only entries that include an e-mail address are displayed.
- You can also use  to select *Sent History*, *Received Hist* or *Direct Input* and select an address from there.



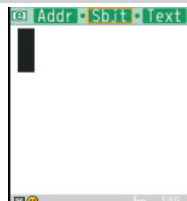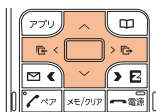

- 5** Use  to select the recipient you want to send to and then press  (Select).

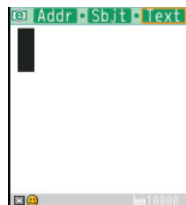


6 Enter a subject and then press  (OK).



7 Enter the text of the message and then press  (OK).

- You can use  to select an item and then press  (Edit) to edit the currently selected item.

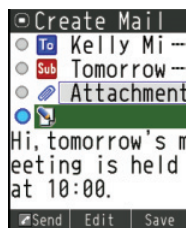


8 Press  ( Send).



➡The e-mail message is sent.





Taking Photos in Simple Mode

- 1** When the standby screen is displayed, press .



- 2** Use  to select *Camera* and then press  (Select).

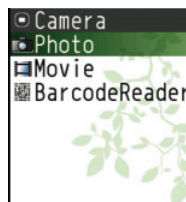


- 3** Use  to select *Photo* and then press  (Select).

➡The monitor screen appears.



Monitor screen



- 4** Point the lens at the subject and then press  (Shot).


➡The photo you just took appears.




Preview screen





Saving a Photo



Press  (Save) in the preview screen.



Viewing Photos in Simple Mode



- 1** When the standby screen is displayed, press .



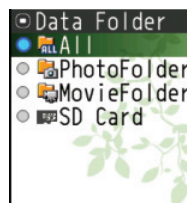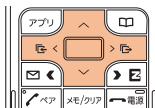


- 2** Use  to select *DataFolder* and then press  (Select).



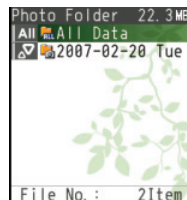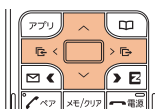

- 3** Use  to select *PhotoFolder* and then press  (Select).

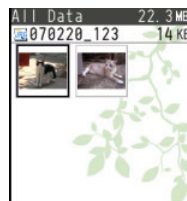

- 4** Use  to select a folder and then press  (Select).



- 5** Use  to select the photo you want to view and then press  (Play).




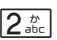
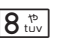


Other Functions


Using the Safety Buzzer

The A5523T is equipped with a Safety Buzzer function.
The Safety Buzzer can be used to make a loud noise in emergency situations.

Safety Buzzer Settings


1 When the standby screen is displayed, press

 **2**  **8** , use  to select **ON** and then press  (**OK**).

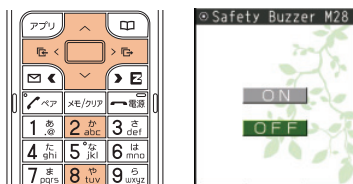


- At the time of purchase, the Safety Buzzer is set to **OFF**.

To sound the Safety Buzzer

When the standby screen is displayed, hold down  **#00** for at least one second.

To stop the Safety Buzzer

Enter the Lock No. and press  (**OK**).

Keying in an emergency services number (110, 119 or 118) also stops the Safety Buzzer.

Note

- The Safety Buzzer continues until you turn it off or remove the battery pack or until the battery pack runs out of charge.
- You cannot adjust the buzzer volume.
- The buzzer is emitted through the speaker even when the Toshiba flat-type stereo earphone 04 is connected or manner mode is selected.
- The Safety Buzzer is not necessarily intended to prevent crime or to protect your safety.
- Do not sound the Safety Buzzer close to your ear. This could damage your hearing.
- Take care when setting up or using the Safety Buzzer as it can be activated accidentally (by a child, etc.).
- The Safety Buzzer will not sound from screens other than the standby screen, when a Standby EZapps is starting up or when the cell phone is turned off.
- You cannot receive calls while the A5523T is emitting the Safety Buzzer. Also, you cannot make calls other than to the emergency services (110, 119 or 118).

In addition to the functions covered in this Basic Manual, the A5523T also has the following convenient features.

EZapps (BREW®)

You can enjoy using various applications including large games that are rich in expressive content and standby applications.

Infrared Communication

You can exchange data such as phone book entries, schedule data, and image data in Data Folder with devices equipped with an infrared communication function.

Fonts

You can change the font (character design) for characters on the display.

Emission OFF

This feature prevents your cell phone from sending or receiving signals. You can use this to prevent interruptions by incoming calls or mail when you are shooting photos or movies or playing music, etc.

Open/Close Lock

Whenever you close the A5523T it automatically locks itself to prevent other people from using it to access EZweb or make calls, etc.

Extra Large Icons

When you set the A5523T to Simple Mode, this feature displays the battery level and signal strength icons at a larger size.

E-mail Voice Read

This function enables the A5523T to automatically read out e-mail messages that you receive (requires the EZapps "EZ Mail for a sound and read").

Dictionary

A "Dictionary" electronic dictionary package is built into the A5523T. Dictionary is made up of *Japanese Dict*, *Eng → Jpn Dict*, *Jpn → Eng Dict* and *Katakana word Dict* and contains a total of roughly 159 thousand entries.

Barcode Reader & Maker

You can use the camera in the A5523T to scan bar codes. This feature will also create bar codes that contain profiles and address book entries.



In Case You Lose Your A5523T


If you set the Remote Auto Lock to *ON* in advance, you will be able to remotely enable the auto lock on the A5523T to prevent others from using your cell phone.


Setting Conditions for Enabling the Remote Auto Lock



You can enable the auto lock if you call your A5523T repeatedly from a registered phone number within a pre-specified period of time.




1 When the standby screen is displayed, press


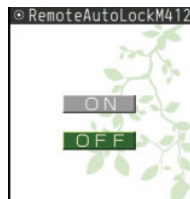
 4 た ghi 1 あ .@ 2 か abc, enter a Lock No., and then press  (OK).



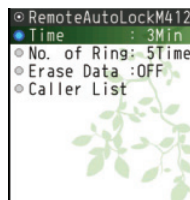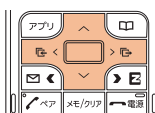


2 Use  to select *ON* and then press  (OK).

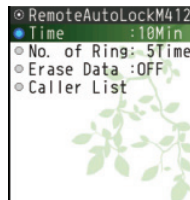
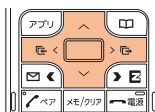


3 Use  to select *Time*, press  (Select), enter a time, and then press  (OK).





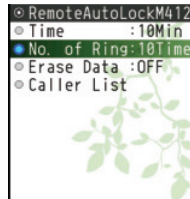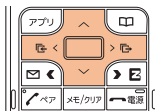



- This sets the time limit for receiving the number of calls set for *No. of Ring* after the first call is received.
- You can set the time in minutes from 01 to 10 (two digits).




4 Use  to select *No. of Ring*, press  (Select), enter the number of calls, and then press  (OK).





- This sets the number of calls to receive to enable the Remote Auto Lock.
- You can set the number of calls from 03 to 10 (two digits).

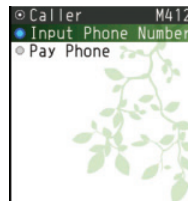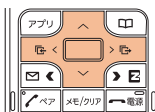5 Use  to select *Caller List*, press  (Select), use  to select one of Caller 1 to Caller 3, and then press  (Edit).



6 Use  to select *Input Phone Number*, press  (Select), enter a phone number, and then press  (OK).

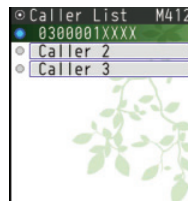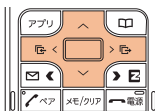

7 Press  (Back) and then press  (Add).



Remotely Enabling the Auto Lock on Your A5523T













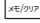





1 Call the A5523T from a registered phone number repeatedly within the time limit set in "Setting Conditions for Enabling the Remote Auto Lock."

- When your A5523T receives the number of calls specified in *No. of Ring* within the time specified in *Time*, Remote Auto Lock is activated and a message is played notifying you that the cell phone is locked.


Note

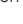- The Remote Auto Lock cannot be enabled when the A5523T is turned off or out of the service area, or Emission OFF is set to *ON*.

Troubleshooting

Symptom	Check	Measure	Reference Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	13
	● Did you hold down  for at least one second?	Hold down  for at least one second.	16
Cannot make calls.	● Is power turned on?	Hold down  for at least one second.	16
	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed, and try again.	16
	● Is your hand or a metal object covering the area around the built-in antenna?	Make sure your fingers or any other part of your hand or a metal object is not touching or covering the area around the built-in antenna.	11
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code first even if you are inside the same area.	29
	● Is Emission OFF set?	Cancel Emission OFF.	—
Cannot receive calls.	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed.	16
	● Is power turned on?	Hold down  for at least one second.	16
	● Is Emission OFF set?	Cancel Emission OFF.	—
No response when a key is pressed.	● Is power turned on?	Hold down  for at least one second.	16
No response when a side key is pressed.	● Is  displayed on the main display or is  displayed on the sub-display?	Press  for at least one second to unlock the side keys.	20
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	13
Calls are answered automatically.	● Is voice memo turned on?	Hold down  for at least one second to turn off voice memo.	34
Cannot hear the other party.	● Is the earpiece volume level too low?	During a call, press  to increase the earpiece volume.	39
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is  (out of range indicator) displayed? Or are you in a location where the signal is too weak?	Move to a location where  (out of range indicator) is no longer displayed.	16
	● Is the wireless line congested or is the phone you are calling busy?	End the call and try again later.	29
The incoming LED flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	33
	● Is  (silent indicator) displayed on the standby screen?	Increase the volume of the incoming call ring tone.	38

Symptom	Check	Measure	Reference Page
Cannot charge the battery pack.	<ul style="list-style-type: none"> ● Is the cell phone inserted in the desktop holder properly? ● Are the plug and connector of the common AC adapter 01 (sold separately) inserted properly? 	Insert the cell phone in the desktop holder properly. Check that the AC adapter connector is properly inserted and that the adapter is plugged into the AC outlet securely.	13
When the camera function is started, no subject is displayed.	<ul style="list-style-type: none"> ● Is a finger or other object covering the camera (lens)? 	Confirm the position of the camera (lens).	70

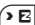- For more detailed information, visit the following website:
 - From the A5523T ➡ Hold down  for at least one second. (Toshiba User Club Site, in Japanese only)
 - From a PC ➡ http://www.toshiba.co.jp/product/etsg/cmt/faq/top_au.htm (In Japanese only)

Index

A

Accessories	10
Adjusting the earpiece volume ...	39
Alert window	24
Area Message	82,85

B

Battery level	16
Battery pack	10,11

C

Camera	69
Recording a movie	72
Taking a photo	71
Cell phone etiquette	1
Cell phone features	2
Character input	40
Character entry modes	40
Charging the battery pack	13
Checking charges	79
C-mail	61
C-mail safety block	61
Creating and sending	62
Reading	63

D

Desktop holder	10,13
Disaster Message Board Service ..	6
Display	11,20,99
Domain	26
Downloading Chaku-Uta®	80

E

Earpiece volume	39
E-mail	53
Attaching images (photos or movies) ..	73
Creating and sending	54
Initial settings	25
Reading	56
Received mail	56
Replying	59
Viewing attached images	58
E-mail address	25
Changing	26

Entering	42
Entering characters	40
Entering characters from the same key ..	41
Entering pictograms	44
Extra large characters	28
EZ•FM	86
Antenna	86
Exiting	89
Listening	87
Switching to background music reception ..	89
EZ menu	23
EZ Navi	82
EZ Navi Walk	83
EZweb	75
Accessing sites	76
Initial settings	25
Top menu	76

H

Hello Messenger	64
Accepting an invitation to join a meeting ..	68
Character list	65
Displaying menu	65
Holding a meeting	66
Inviting	67

I

Incoming history	31
Indicators	20,21,99
Initial settings	17,25
Internet	75
Sites	76

K

Key assignments	14
-----------------------	----

L

Language	18
Launcher menu	22
Learning the basics	14
Limit Mode	90
Limiting	92
Registering members	90
Setting use limits	94

Turning on	96
Loud volume	39

M

Mail

C-mail	61
E-mail	53

Making an International Call

Manner mode

Movies

Attaching to an e-mail	73
Recording	72
Viewing	74

N

Names of parts

O

One-ring calls

One-touch dialing

Option menu

Outgoing history

P

Pair Function

Inviting to a Hello Messenger meeting	52
Making a call to a pair partner	51
Registering a pair partner	50
Sending a mail to a pair partner	52

Passwords

Phone (call)

Answering	30
Making	29
Redialing	31
184/186	29

Phone book

Dialing	47
Editing	48
Saving	45
Saving a phone number from the incoming or outgoing history	49

Phone number

Photos

Attaching to an e-mail	73
Taking	71
Viewing	74

Playback

Voice memo	35
------------	----

Power supply

Turning off power	16
Turning on power	16

R

Ring tones

Changing the type	36
Changing the volume	38

Remote Auto Lock

S

Safety Navi

Security code

Signal strength

Simple Mode

Entering	97
Exiting	98
Saving a phone book entry	102
Sending messages	104
Taking photos	106
Viewing photos	107
Viewing the display	99
Viewing the Simple menu	100

Sites

Bookmarking	78
Viewing from bookmarks	79

Soft key

Spam

Standby screen

Sub-display

T

Toshiba flat-type stereo earphone 04

Turning on/off the power

V

Viewing

Photos/Movies	74
---------------	----

Voice memo

Playback	35
Turning on	34

W

Warp function key

For inquiries, call:

au Customer Service Center (General Information)

From EZweb:

Access Method



EZ ▶ Top Menu ▶ auお客さまサポート (au Customer Support)

▶ お問い合わせ (Inquiries)

• Menus are subject to change without prior notice.

From regular phones:

 **0077-7-111**

フリーコール

(toll free)

From au cellphones:

157 area code not required


(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.



モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sales: KDDI CORPORATION・

OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by:

TOSHIBA CORPORATION

February 2007 Edition

Read this code for
an easy access to
au Online Manual.

